




**Toy Room²
Instruction Manual
05X Series**

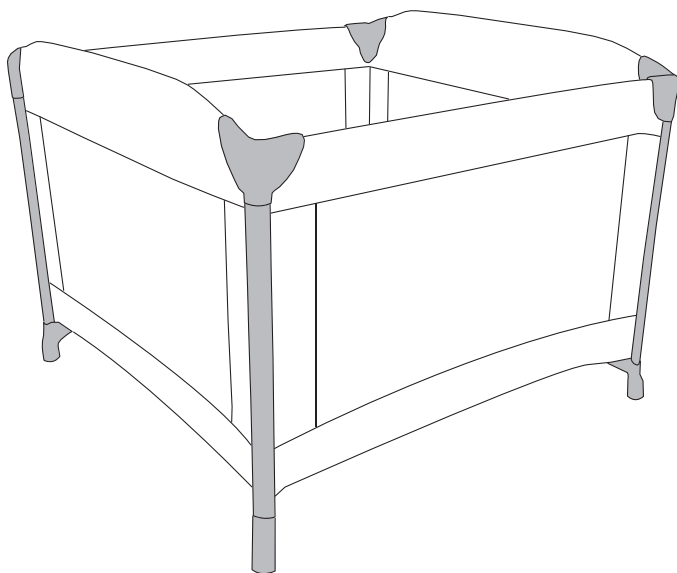



WARNINGS

Read all instructions **BEFORE** assembly and **USE** of product.
KEEP INSTRUCTIONS FOR FUTURE USE.


- **This product is a TOY playard for dolls and stuffed toys ONLY.**
- **NEVER use this toy for a baby or child for any purpose whatsoever.**
- **Death or Serious Injury may occur.**
- **Maximum weight allowed = 5 lbs.**
- The product, including side rails, must be fully erected prior to use. Make sure latches are secure.
- Always provide the supervision necessary for the safety of your child.
- This product requires adult assembly. Be sure the playard is set up completely and properly before use.
- ALWAYS check that each of the four top rails are locked and the center of the floor is pushed down before use.
- Do not use any attachments or items not included in this instruction manual with this playard.
- POSSIBLE PINCHING HAZARD. When setting up the playard, use caution to avoid pinching your fingers on the top corners. Keep children away from the playard during set-up.
- Discard all packaging materials properly. Do not allow children to play with them.

Please do not return this product to the store

If you experience any difficulty with the assembly or use of this product, or if you have a question regarding these instructions, please contact our Customer Service Department at (877) 456-5049 between the hours of 8:30 am and 5:00 pm Central Time.

PLEASE NOTE: Styles and colors may vary

Assembling and Using your Toy Playard

 To ensure safe operation of your toy playard, please follow these instructions carefully.

Unpacking the Product from the Box

- Carefully remove toy playard and all parts from the box and plastic bag.
- Remove any cardboard packing materials.
- Identify the parts (toy playard, travel bag, and documents (documents not shown)) with the pictures in Figure 1.
- Remove all plastic or packing materials from any areas of the product and discard properly. Do not allow children to play with them.

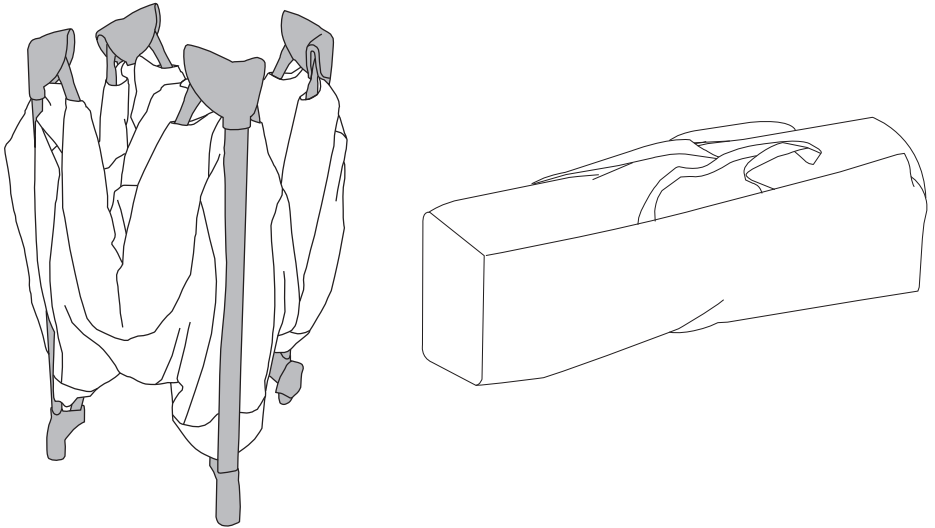


Figure 1

 **CAUTION**

Adult assembly is required for this product. No Tools Required.

Unpacking from the Travel Bag/Assembling the Toy Playard

- Keep children away from playard while unpacking.
 - Open the travel bag and remove the toy playard.
 - Set the toy playard so it is resting on its feet.
 - Pull upward on an upper side rail until it is straight. See Figure 2.
 - Then rotate the rail inward to lock. See Figure 3.
- NOTE: There is ONE mechanism that locks each rail on all four sides.
- Repeat on the other three rails.
 - Once you have locked the side rails in the up position, go back and check each side rail again to be sure they are all locked into position.
 - Push down on the center of the floor. See Figure 4.

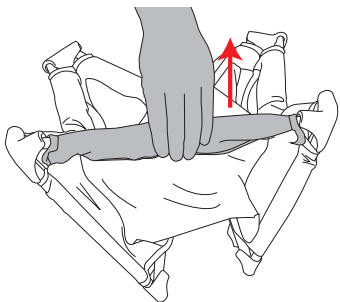


Figure 2

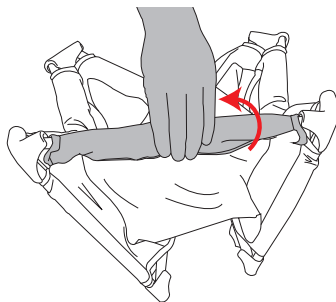


Figure 3

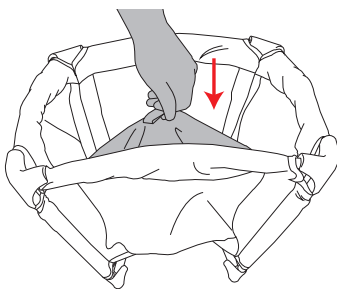


Figure 4

WARNING

Be careful not to pinch your fingers on the top corners during assembly. **ALWAYS** ensure that all side rails are locked into position before using this product. **NEVER** use items not recommended by Joovy with this product.

Folding/Packing the Toy Playard

- Pull upward on the webbing loop near the center of the toy playard floor. See Figure 5.
- Then unlock one upper rail by rotating the rail outward and then push down. See Figure 6.
- Repeat on the other three rails until all four top rails have been unlocked and folded.
- Gather the playard together until it is compact and completely folded. See Figure 7.
- Open the travel bag and slide it over the folded playard. Once the playard is completely inside the travel bag pull the zipper to close. See Figure 8.

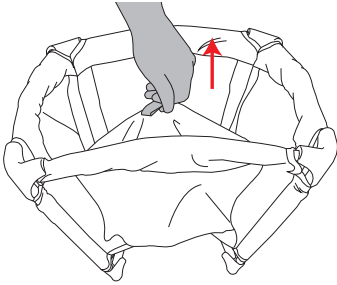


Figure 5

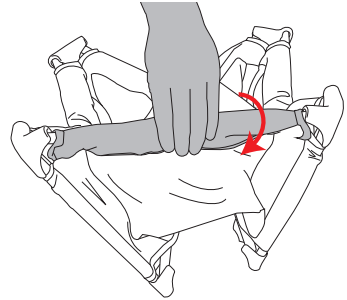


Figure 6

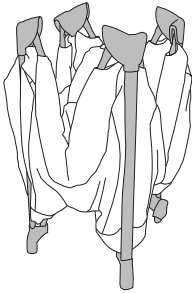


Figure 7

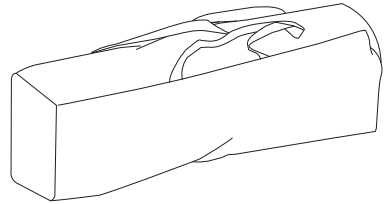


Figure 8

Maintenance

All of the fittings, locks, rivets, and other hardware and plastic parts on the playard should be inspected periodically to insure that they are secured properly and not damaged or malfunctioning. The straps and fabric items and their stitching should also be inspected periodically to ensure that they are secured properly and not loose, torn or otherwise damaged. All moving parts and hinges should also be checked periodically to ensure they are operating properly.

If using this item at the beach you must clean sand off of ALL the parts before packing it into the travel bag. Getting sand in the top rail locks may damage the function.

Any missing, broken, or worn components should be replaced immediately, and the playard should not be used until they are replaced. Only original manufacturer's components should be used. If needed, please contact Joovy at our toll-free phone number.

Cleaning

The fabric material on this product can be cleaned using mild household soap or detergent and warm water on a sponge or clean cloth. Always allow the fabric to completely air dry before using the product.

The frame should always be kept clean and free of dirt and foreign matter. Use a sponge or cloth dampened with warm water and a mild detergent cleaner to clean these parts if necessary.

SATISFACTION GUARANTEED

We want you to be completely satisfied with your purchase of this product. Should you experience any difficulty in assembling or using this product, or if you have any questions - Please contact our Customer Service Department at (877) 456-5049 between the hours of 8:30 am and 5:00 pm Central Time.

Please log onto www.joovy.com to register your new Joovy product.



Free Shipping!
On Strollers, Toys
& Playards
On orders shipped domestically only.



Strollers	Highchairs	Playards	Toys	Accessories	Customer Service	Store
-----------	------------	----------	------	-------------	------------------	-------



©2010 joovy

Contact: customerservice@joovy.com

2919 Canton Street, Dallas, TX 75226

(877)456-5049

Fax: (214)761-1774



2919 Canton Street • Dallas, TX 75226 • (877) 456-5049 • Fax: (214) 761-1774
E-mail: customerservice@joovy.com • Website: www.joovy.com

©Joovy 2011 • Document Version 060111