 


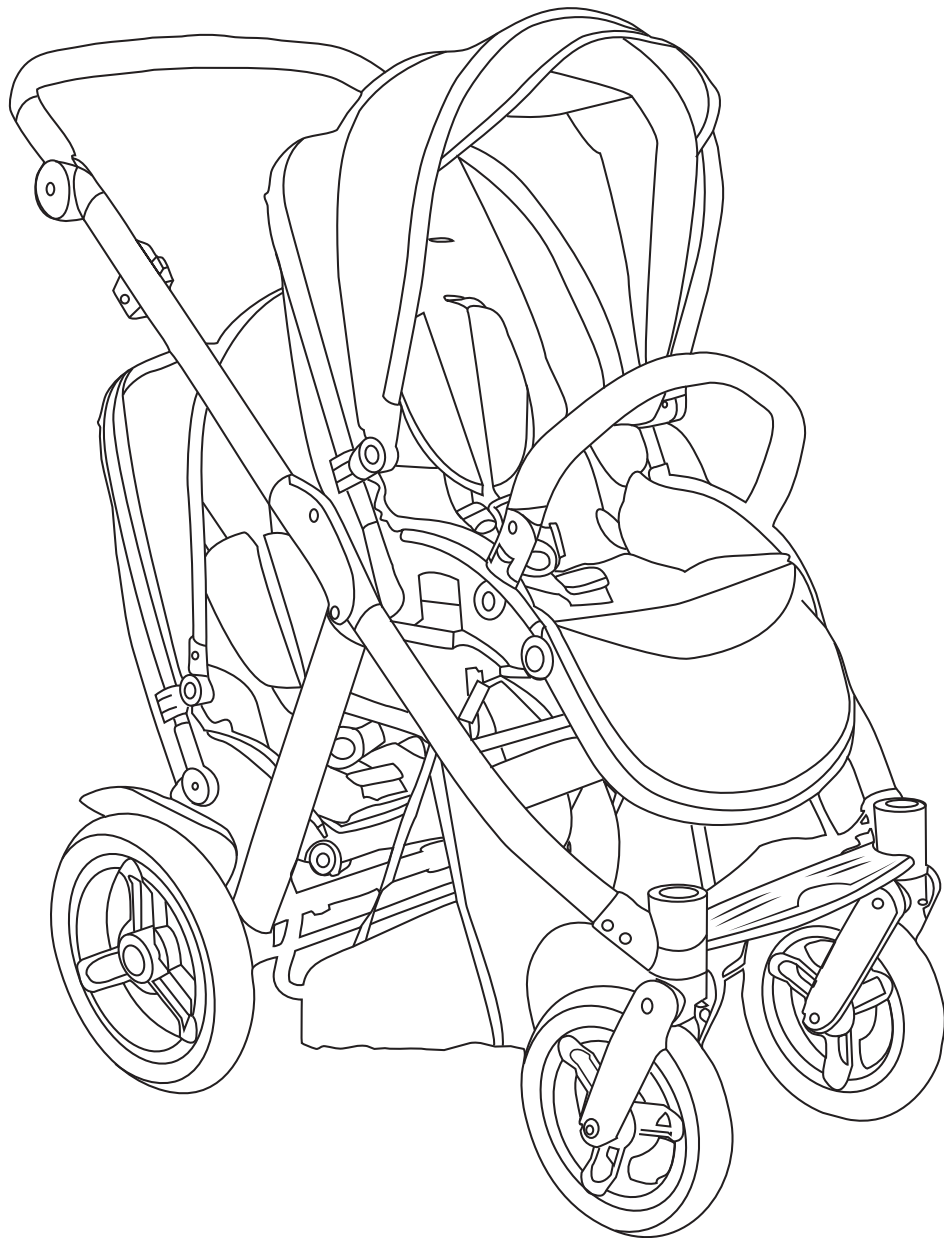

TooQool 801X



WARNING

Please read this instruction manual completely before using this stroller. Keep these instructions for future reference.

- Failure to follow these instructions could result in serious injury or death.
- Never leave child unattended.
- Avoid serious injury from falling or sliding out.
- Always use restraint system and ensure all children are positioned according to these instructions.
- Be certain that the stroller is fully opened, the primary lock is secured and the wheel brakes are on before allowing children near the stroller.
- The maximum weight of the child that can be seated in each seat of the stroller is 55 lbs.
- Use of the stroller with two children totaling more than 110 lbs., will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition.
- Never allow a child to step on the leg support or footrest to get into or out of the stroller.
- Do not use the stroller on stairways or escalators.
- Hanging purses, shopping bags, parcels, diaper bags or other accessory items from the handles or any other parts of the stroller may change the balance of the stroller and cause a hazardous unstable condition.
- The maximum weight that can be carried in the storage basket is 5 lbs. Excessive weight may result in a hazardous unstable condition.
- Never allow your stroller to be used as a toy.
- Discard all packaging materials properly. Do not allow children to play with them.
- Check your stroller for loose rivets, snaps, worn parts, and torn material or stitching on a regular basis.
- Discontinue use of the stroller should it malfunction or become damaged.

Please do not return this product to the store

If you experience any difficulty with the assembly or use of this product, or if you have a question regarding these instructions, please contact our Customer Service Department at (877) 456-5049 between the hours of 8:30 am and 5:00 pm Central Time.

1 Unpacking the Product

- Remove everything from the box and identify the parts using **Figure 1.1** (not to scale).
A: stroller, **B:** 2 rear wheels, **C:** 2 front wheels, **D:** front seat, **E:** rear seat, **F:** 2 mud guards, **G:** bumper bar, **H:** 2 rear seat brackets, and documents (not shown).
- Discard all packaging materials properly including plastic coverings.
- DO NOT allow children to play with any packaging materials.

WARNING

Adult assembly is required for this product. No Tools Required.

2 Unfolding the Stroller

- Keep children away from stroller while unfolding.
- Release the folding lock latch located on the side by lifting the latch off of the stroller frame. **See Figure 2.1.**
- Lift up on the handlebar of the stroller until it is upright. **See Figure 2.2.** Pull and push on the handlebar to ensure it is secured.

CAUTION: While unfolding the stroller, be careful to keep your fingers from being pinched by moving parts

WARNING

ALWAYS keep children away from the stroller when unfolding.

3 Installing the Mudguards/Rear Wheels

- Make sure the rear wheel brake lever is released (in the up position). **See Section 6.**
- Ensure you have identified the correct mudguards for each side. The outside of each mudguard is marked with an “L” or an “R”. **See Figure 3.1.** Match these with the “L” and “R” found on the rear wheel hubs. **See Figure 3.2.**
- Position the larger hole of a mudguard so that the hole slides over the tab located on the rear wheel hub. **See Figure 3.3.** Then rotate the mudguard so the smaller hole lines up with the circular tab. **See Figure 3.4.** Push the mudguard so that the teeth on the smaller hole snap on to the circular tab.
- Repeat for the other mudguard.
- Install a rear wheel by sliding the axle into the hole in the wheel hub until it clicks into place. **See Figure 3.5.** Pull on the wheel to ensure it is secure.
- Repeat this step for the other wheel.
- To remove the rear wheels, press the release buttons on the rear axle bar and pull the wheels from the stroller. **See Figure 3.6.**

4 Installing the Front Wheels

- Tilt the stroller so it is resting on the rear wheels and the handlebar.
- Slide one front wheel onto the front wheel post until it clicks in place. **See Figure 4.1.**
- Repeat for other front wheel.
- Pull on the wheels to ensure they are installed properly.
- To remove the front wheels, press the release button on the front of the wheel and pull it away from the stroller. **See Figure 4.2.**

5 Front Wheel Swivel Locks

- The front wheels can be set to “lock” by pushing down on the locking button and “swivel” by pushing down on the locking button a second time. **See Figure 5.1.**

WARNING

ALWAYS set BOTH wheels to the same mode before using stroller.

6 Rear Wheel Brakes

- Always engage rear brakes before placing child in or removing a child from the stroller.
- The rear wheel brakes can be engaged by pushing down on the brake lever behind the right wheel and released by pulling up on the brake lever. **See Figure 6.1.**

NOTE: Rock the stroller back and forth to ensure the brake is fully engaged.

WARNING

Always engage the parking brake when the stroller is not being pushed so that it will not roll away. Never leave stroller unattended, especially on a hill or incline, as the stroller may tip over or slide.

7 Unfolding the Seats

For both front and rear seats – pull up on the recline mechanism and then pull up on the seatback until it unfolds and locks into position.

See Figure 7.1.

8 Installing/Removing the Front Seat

The front seat is marked “FRONT” near the bottom of the seatback. The front seat can be placed on the stroller facing forward or backward.

- Place the seat on the stroller so that the male brackets on the bottom of the seat line up with the female brackets on the stroller frame. **See Figure 8.1.**
- Push down on both sides of the seat until both brackets snap into place. Pull up on the seat on both sides to ensure it is secure.
- To remove the seat from the stroller, squeeze upward on both triggers found on the seat above the brackets and pull the seat off the stroller. **See Figure 8.2.**

9 Installing/Removing the Rear Seat Brackets

- Remove the rear seat bracket covers, located behind the rear wheels, by pressing the button and lifting the cover. **See Figure 9.1.** Store covers for future use.
- Locate the correct rear seat brackets for each side. Each bracket is marked with an “L” or an “R”. **See Figure 9.2.** Match these with the same “L” and “R” found on the rear wheel hubs.
- Position the bracket so that the hook on the bracket hooks onto the post. **See Figure 9.3.**
- Rotate the bracket down so that the post of the bracket enters the slot and snaps into place. **See Figure 9.4.** Pull up on the bracket to ensure it is secure.
- To remove the bracket, press the button and rotate the bracket up to remove the bracket. Reattach the bracket cover so no dirt gets into the slot. Store brackets for future use.

10 Installing/Removing the Rear Seat

The rear seat is marked “REAR” near the bottom of the seatback. The rear seat can ONLY be placed on the stroller facing forward.

- Place the seat on the stroller so that the male brackets on the bottom of the seat line up with the female brackets on the stroller frame, located behind the rear wheels. **See Figure 10.1.**
- Push down on both sides of the seat until both brackets snap into place. Pull up on the seat on both sides to ensure it is secure.
- To remove the seat from the stroller, squeeze upward on both triggers found on the seat above the brackets and pull the seat off the stroller. **See Figure 10.2.**

11 Operating the Canopy

- Both the front and rear canopies can be adjusted to be fully opened or closed. **See Figure 11.1.**
- The front seat canopy can be made larger by unzipping the extension and pulling the canopy open. **See Figure 11.2.**

WARNING

Possible pinching hazard - Be careful of the side hinges when opening and closing the canopy.

12 Seat Recline Positioning

These steps are for both front and rear seats. The front seat has 3 positions while the rear seat has only 2 positions.

- To recline the seats, pull up on the recline mechanism and move the seatback to the desired position. **See Figure 12.1.**
 - To adjust the seatback to its most upright position, pull up the recline mechanism and move the seat to the upright position.
- NOTE:** When the recline mechanism is pulled, the seat may also be pushed all the way forward.

WARNING

Whether the seat is upright or reclined, **ALWAYS** make certain that the recline mechanism is engaged before placing the child in the seat. Push down on the seatback to be sure it is secure. **DO NOT** adjust the seat when the child is in the seat.

13 Using and Adjusting the Seat Restraint System

These steps are for both front and rear seats.

- There are three height adjustment positions for the shoulder harness. Adjust the height to the closest height above your child's shoulders.
- To remove the shoulder harness, turn the plastic ends sideways and push them through the slots in the seatback. Reattach the harness at the proper height by reinserting the plastic ends through the slots. **See Figure 13.1.** Ensure both straps are the same height.
- To remove the crotch strap, turn the plastic end sideways and push it through the slot in the seat bottom. Reattach the crotch strap by pushing the plastic end down through the slot.
- To unlatch the buckle press the center button and remove the male ends of each buckle. **See Figure 13.2.**
- Carefully place the child in the seat with the shoulder straps over their shoulders and chest. Then place the crotch strap between the child's legs.
- Bring the shoulder/waist buckles into the crotch buckle until the shoulder/waist buckles snap into place. **See Figure 13.3.**
- Tighten the waist belt to be snug around the child's waist.
- The shoulder, waist, and crotch straps may be adjusted using the sliding buckles on these straps.

WARNING

Always use the crotch strap in combination with the waist belt. Avoid serious injury from falling or sliding out. **Always** use the restraint system. The **FRONT** seat is not suitable for children under 3 months. The **REAR** seat is not suitable for children under 6 months.

14 Installing/Removing the Bumper Bar to/from the Front Seat

- Position the bumper bar so that the "L" and "R" are on the left and right side of the seat frame (as determined when standing behind the stroller). Then line up the tabs with the slots on the seat frame and push them in until the bumper bar clicks into place. **See Figure 14.1.**
- Pull on the bumper bar to ensure it is secure.

NOTE: The bumper bar can be adjusted or removed when folding the stroller.

- To adjust the bumper bar, press the release buttons on the inside of the connectors and rotate it either all the way up or all the way down. **See Figure 14.2.**
- To remove the bumper bar, press the outside buttons on each side of the seat frame. **See Figure 14.3.** Then pull the bumper bar away from the seat frame.

15 Installing/Removing the Bumper Bar to/from the Rear Seat

- Remove the slot covers by pressing the outside buttons on each side of the seat frame. **See Figure 15.1.** Then pull the covers away from the seat frame and store for future use.
- Follow the instructions in **section 14** to install and remove the bumper bar from the rear seat.

16 Adjusting the Handlebar

The handlebar can be adjusted to 6 positions.

- To adjust the handlebar simultaneously press both buttons located on the inside of the handlebar. **See Figure 16.1.**
- While holding the buttons, adjust the angle of the handlebar to the desired position and then release the buttons.

17 Storage Basket

The maximum weight that can be carried in the storage basket is 5 lbs.

18 Using the Leg Support

- To raise and lower the front or rear leg support, press the buttons simultaneously on both sides of the leg support. **See Figure 18.1.**

WARNING

NEVER allow a child to step onto or sit on the leg support or footrest. This may cause the stroller to tip over and injure the child.

19 Removing/Reattaching the Seat Pad for Washing

These steps are for both front and rear seats.

- To remove the seat pad, unlatch the buckle by pressing on the center button. **See Figure 13.2.**
- To remove the shoulder harness, turn the plastic ends sideways and push them through the slots in the seat pad. **See Figure 13.1.**
- The waist strap can be separated from the shoulder strap by sliding the waist buckle out. **See Figure 19.1.**
- Feed the buckle ends of the waist straps through the seat pad.
- Feed the buckle end of the crotch strap through the seat pad.
- Remove the seat pad.
- To reattach the seat pad, first lay the pad on the seat.
- Feed the buckle ends of the shoulder straps through the seat pad.
- Feed the buckle ends of the waist straps through the seat pad.
- Reattach the shoulder strap with the waist strap. **See Figure 19.1.**
- Feed the buckle end of the crotch strap through the seat pad.

20 Folding the Stroller

- Keep children away from stroller while folding.
- Remove rear seat.
- **(OPTION 1)** Remove front seat for most compact fold.
- **(OPTION 2)** Keep front seat attached:
 - Close the canopy.
 - Remove or fold the bumper bar to its forward position.
 - Fold the seat by pulling on the recline mechanism and pushing the seatback all the way forward. **See Figure 20.1.**
- Press the button on the right side of the stroller, below the handlebar. **See Figure 20.2.** While still holding the button, pull up on the triggers found on both sides of the stroller. **See Figure 20.3.** Then push the handlebar all the way forward until the folding latch locks into place. **See Figure 20.4.**
- Pull up on the handlebar to ensure the folding latch is secure.

WARNING

ALWAYS keep children away from the stroller when folding.

Maintenance

All of the fittings, snaps, locks, rivets, and other hardware and plastic parts on the stroller should be inspected periodically to ensure that they are secured properly and not damaged or malfunctioning. The safety harness, as well as all other straps and fabric items and their stitching should also be inspected periodically to ensure that they are secured properly and not loose, torn or otherwise damaged. All moving parts, such as wheels, brakes, and hinges should also be checked periodically to ensure they are operating properly.

Any missing, broken, or worn components should be replaced immediately, and the stroller should not be used until they are replaced. Only original manufacturer's components should be used. If needed, please contact Joovy at our toll-free phone number.

Cleaning

The fabric material on this stroller can be cleaned using mild household soap or detergent and warm water on a sponge or clean cloth. Always allow the fabric to completely air dry before using the stroller.


The frame and wheels should always be kept clean and free of dirt and foreign matter, especially after operating the stroller in rain, snow, or other harsh environments. Use a sponge or cloth dampened with warm water and a mild detergent cleaner to clean the wheels after such use.

SATISFACTION GUARANTEED


We want you to be completely satisfied with your purchase of this product. Should you experience any difficulty in assembling or using this product, or if you have any questions, please contact our Customer Service Department at (877) 456-5049 between the hours of 8:30 am and 5:00 pm Central Time.

Please log onto www.joovy.com to register your new Joovy product.


[Shopping Cart \(0 Items\)](#) [Login](#) [Account](#) [Store Locator](#) [Customer Service](#) [877-456-5049](#) [GO](#)



[eat](#) [play](#) [sleep](#) [walk](#) [stroll](#) [ride](#) [potty](#) [carry](#) [parts](#) [blog](#) [contact](#)



Caboose Too Ultralight Stand-On Tandem Stroller



*Shown with rear seat accessory

MORE

latest news

8/23/2013 -

featured products



Twin Roo Infant Car Seat Frame Stroller



theBabaSling



Groove Ultralight



Roo Infant Car Seat Frame Stroller



Introducing the Joovy Boob

Meet the newest addition to the Joovy family. There is no better bottle on the market today!

[Shop Now](#)

TheBabaSling by Joovy

As advocates for "baby wearing" we believe theBabaSling is the most amazingly versatile, easy to use sling on the market today.

[Shop Now](#)



TwinRoo®

 
HiLo



moonRoom™

joovy®


Too Qool
801X

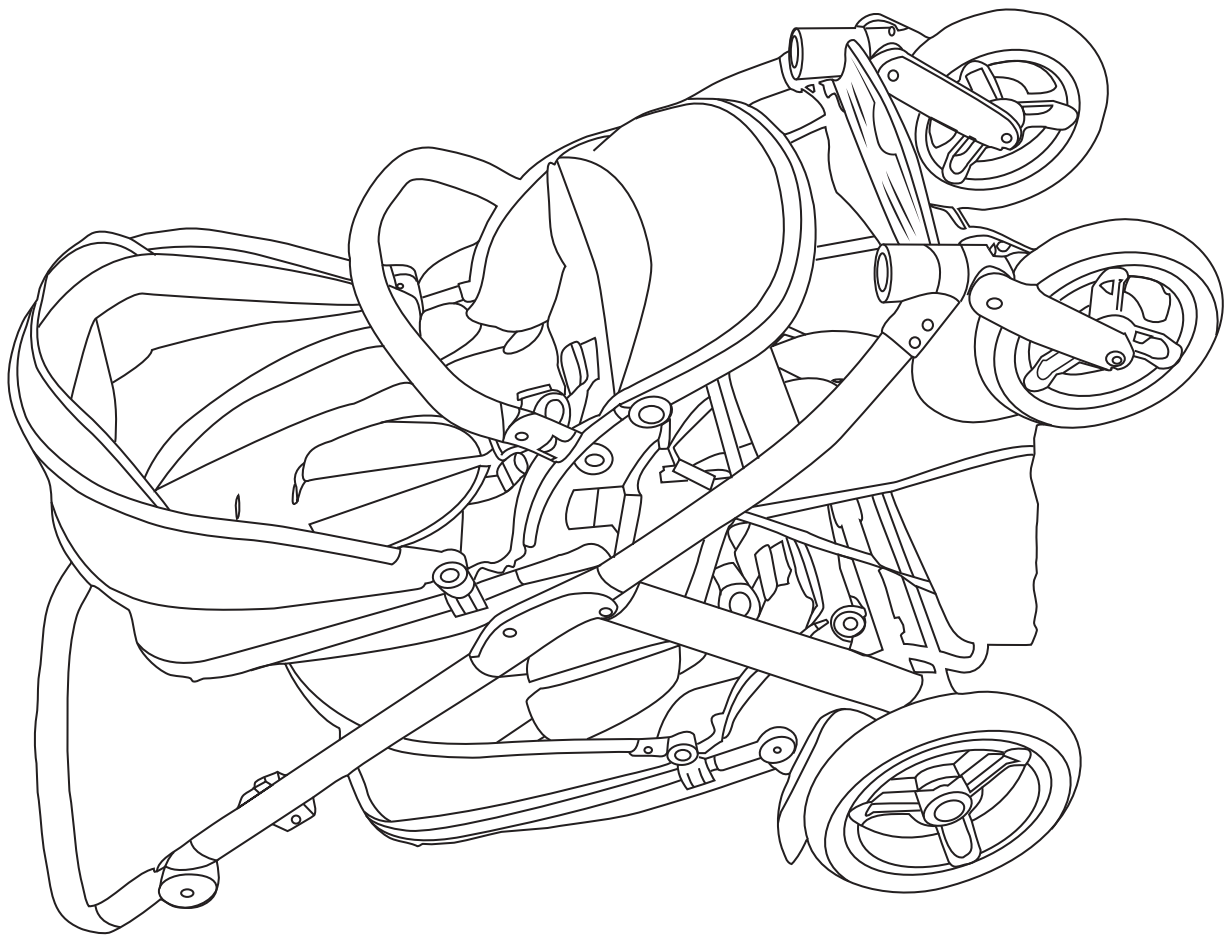


©joovy 2013 • Document Version 083013

1.1

 
A:

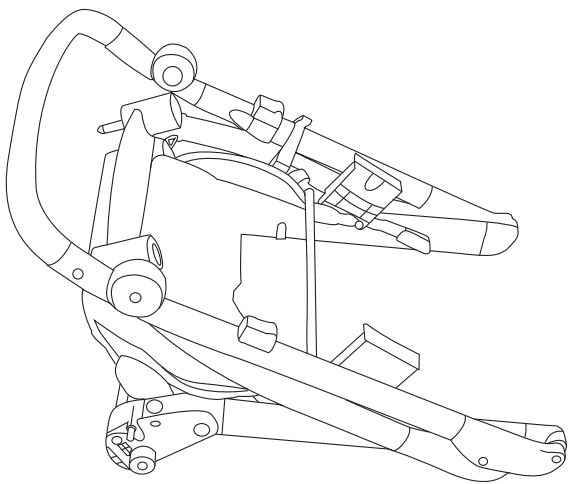


B:

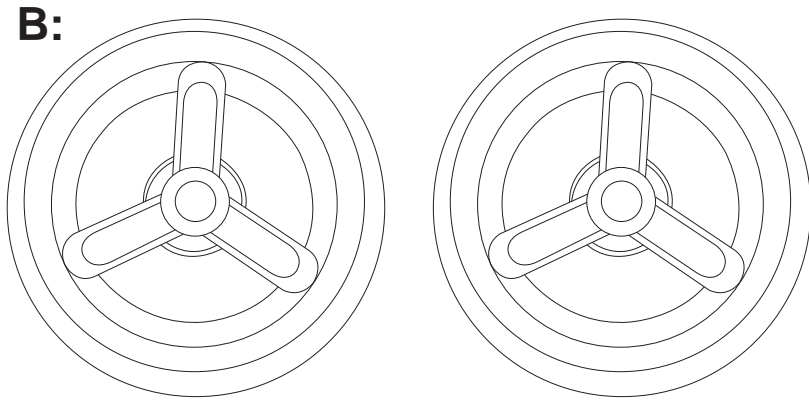 


C:

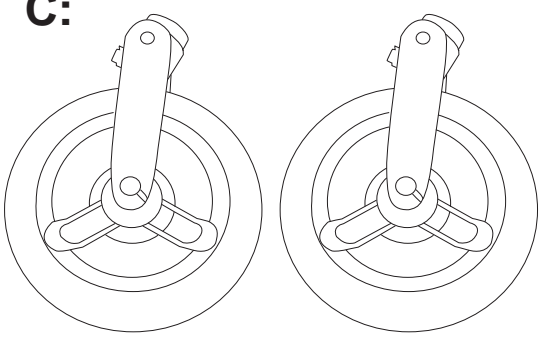 


D:

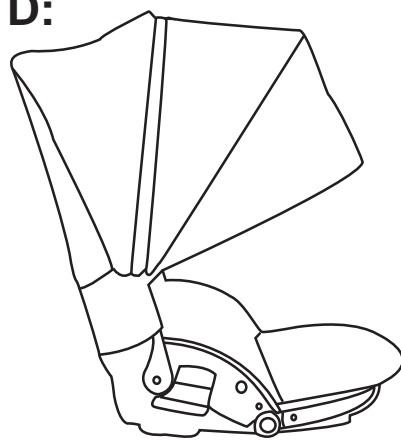 


E:

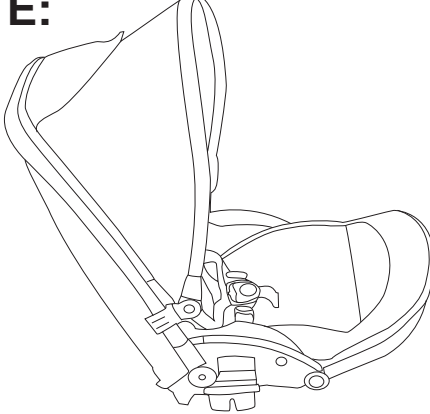 


F:

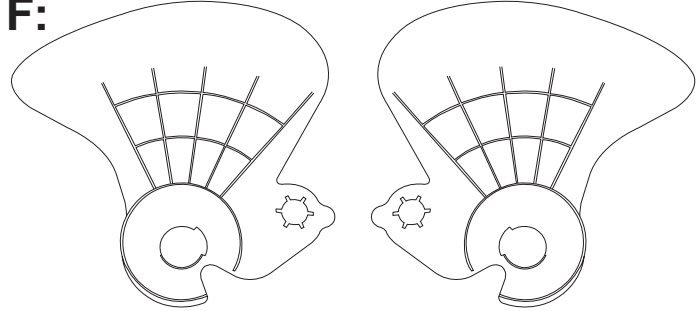 


G:

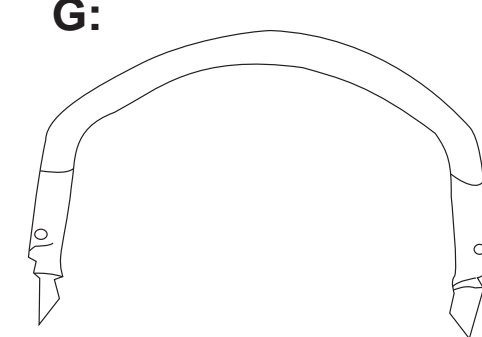 


H:

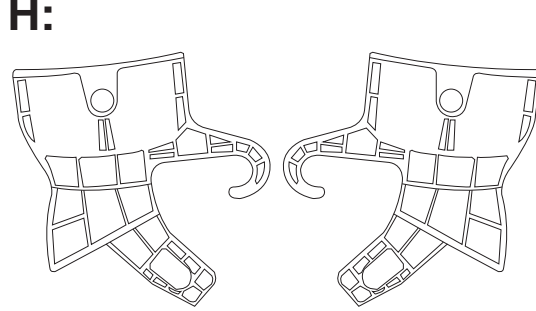 

 
2.1

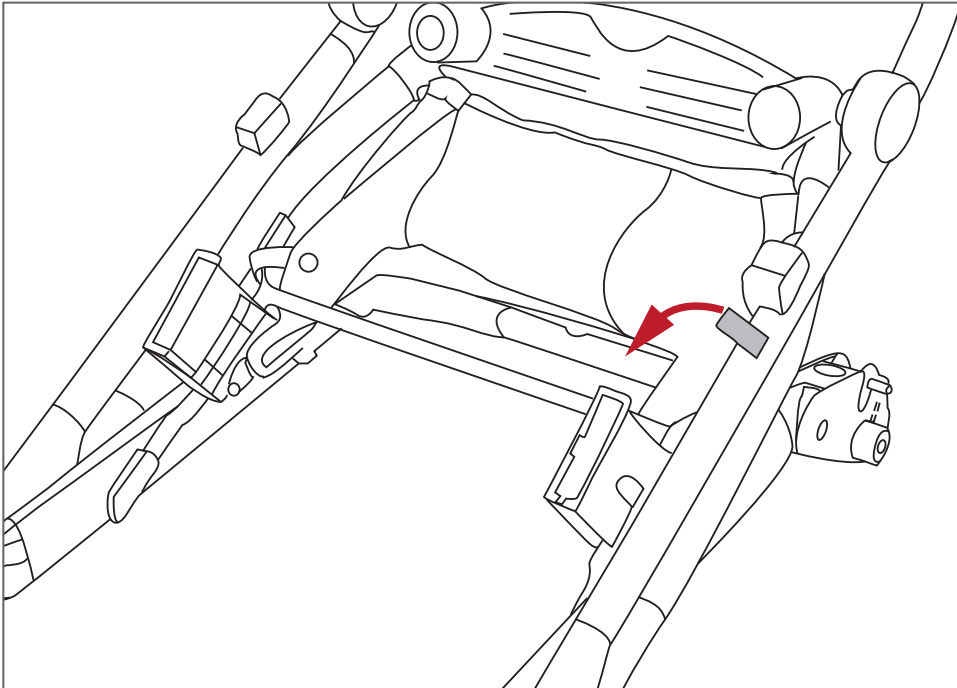

 
2.2

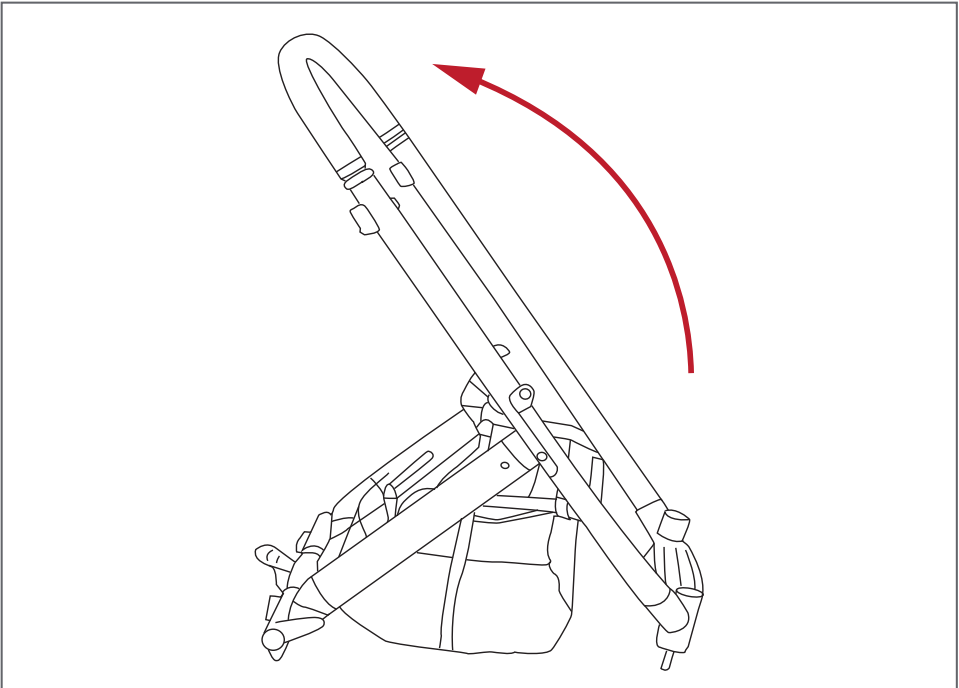

 
3.3

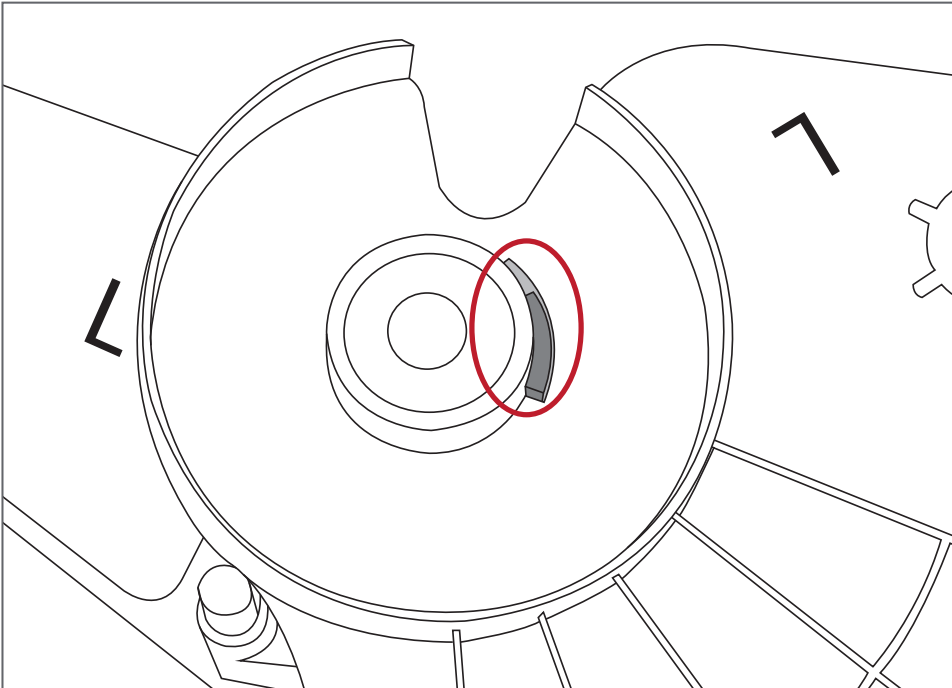

 
3.4

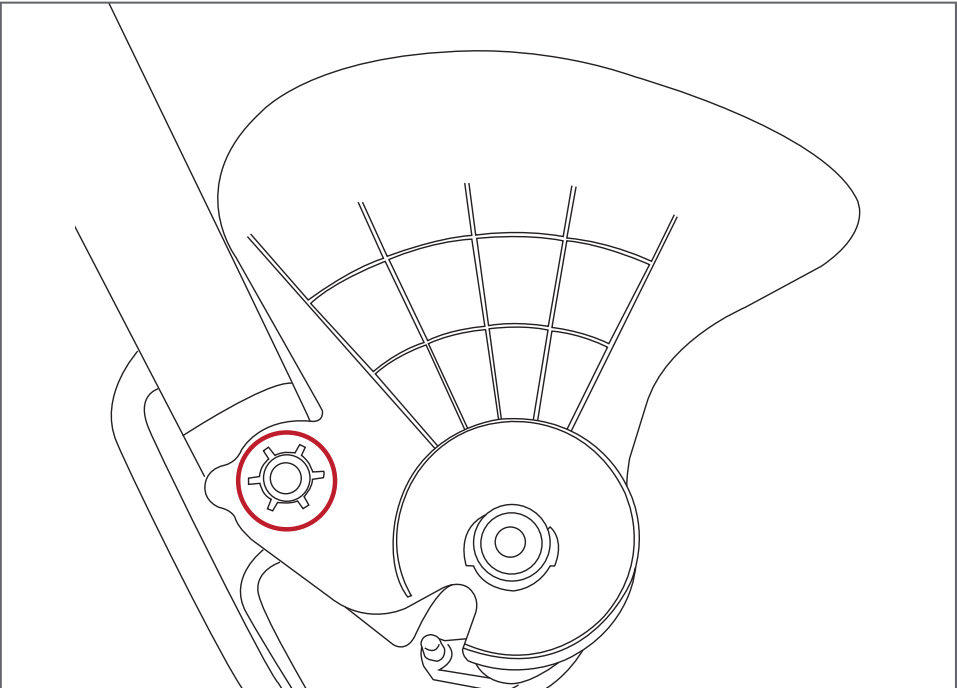

 
3.1

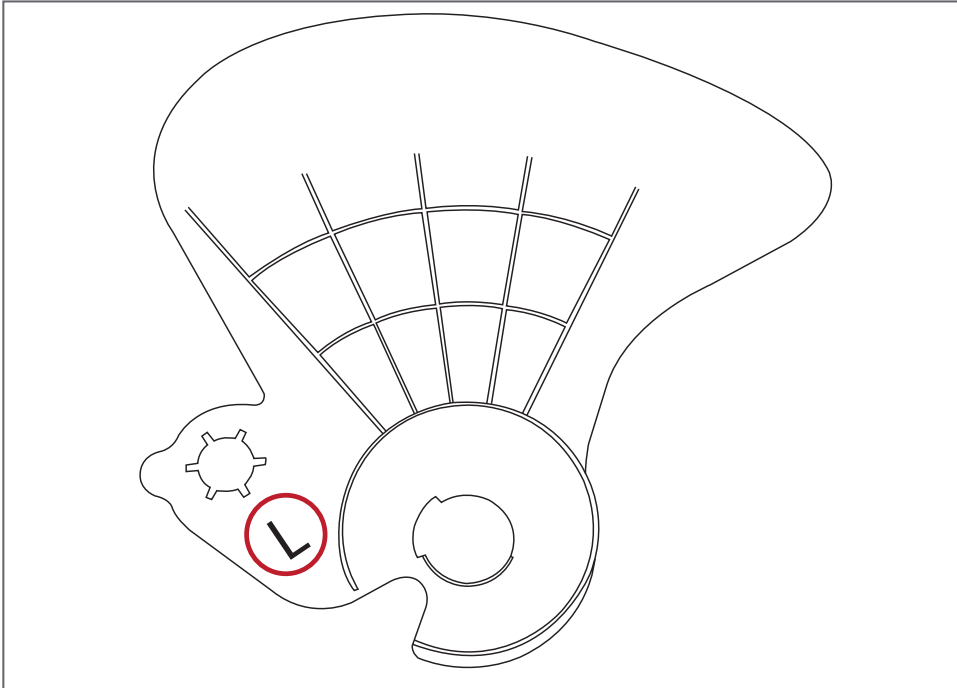

 
3.2

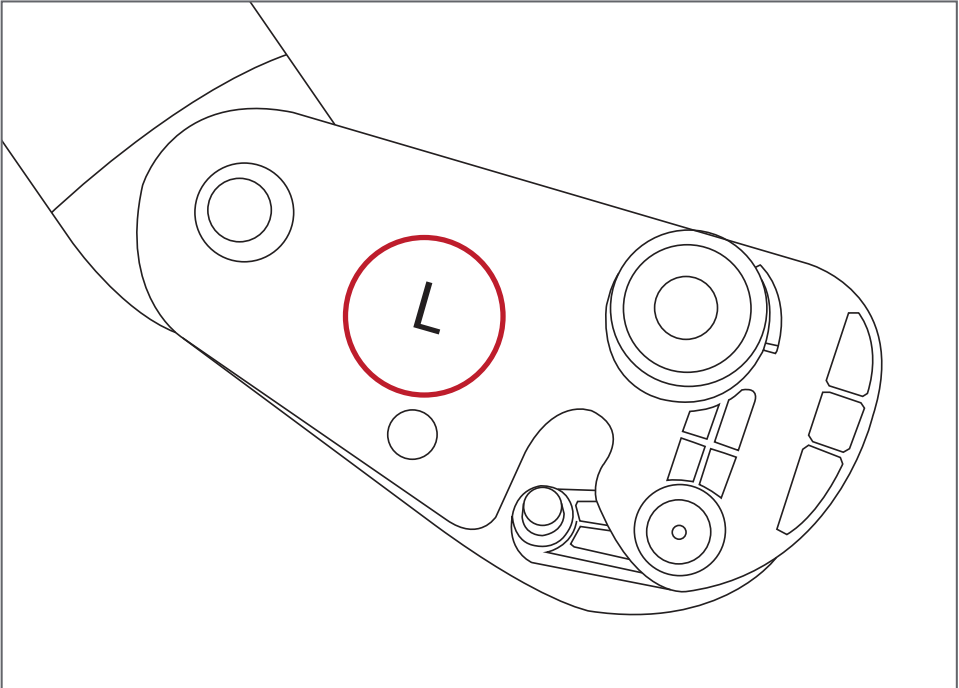

 
3.5

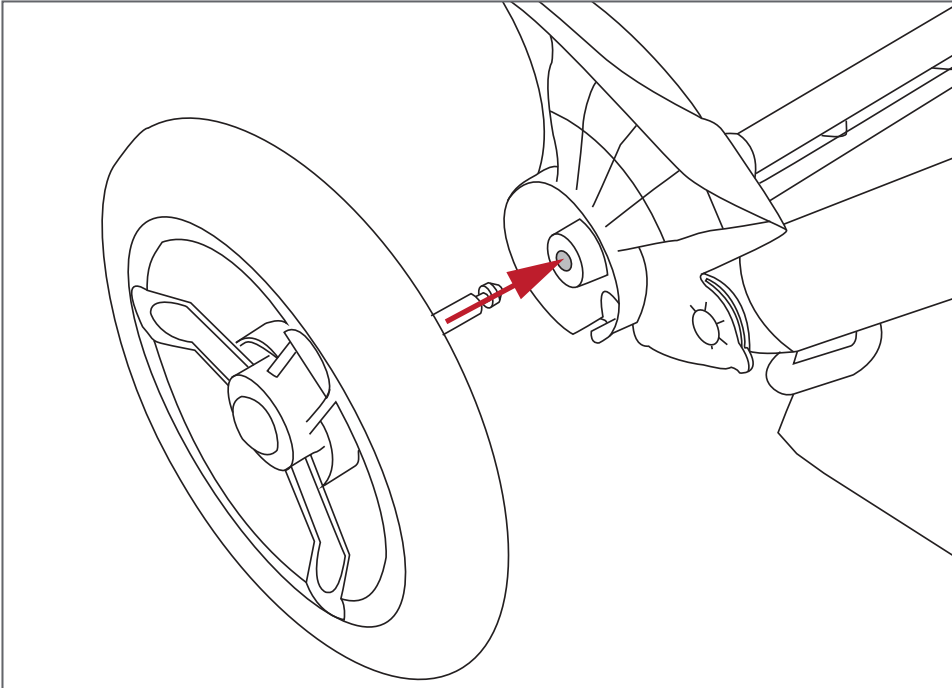

 
3.6

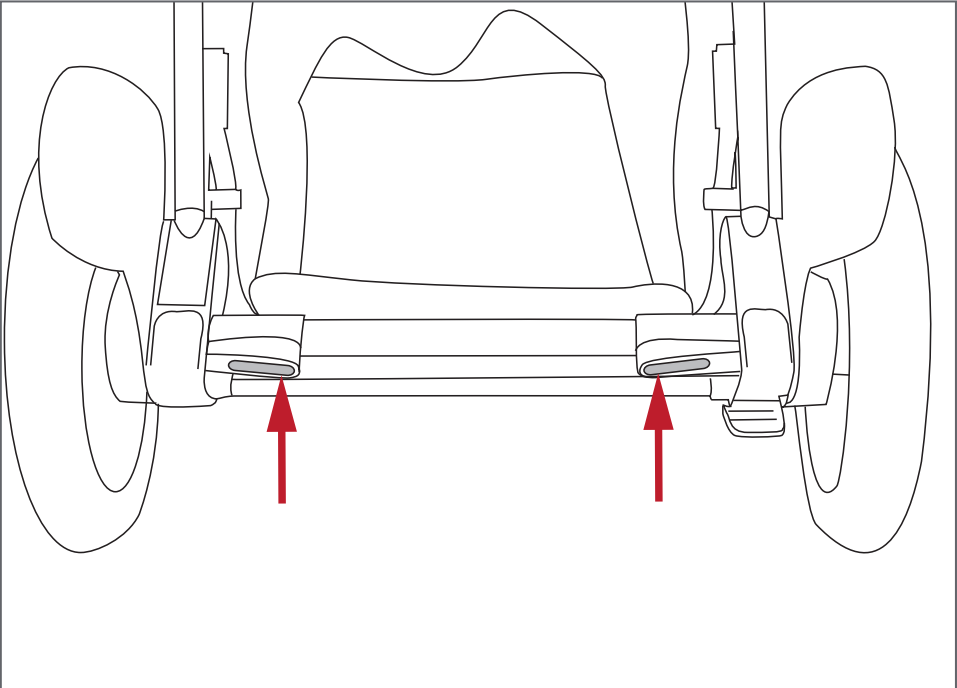

 
4.1

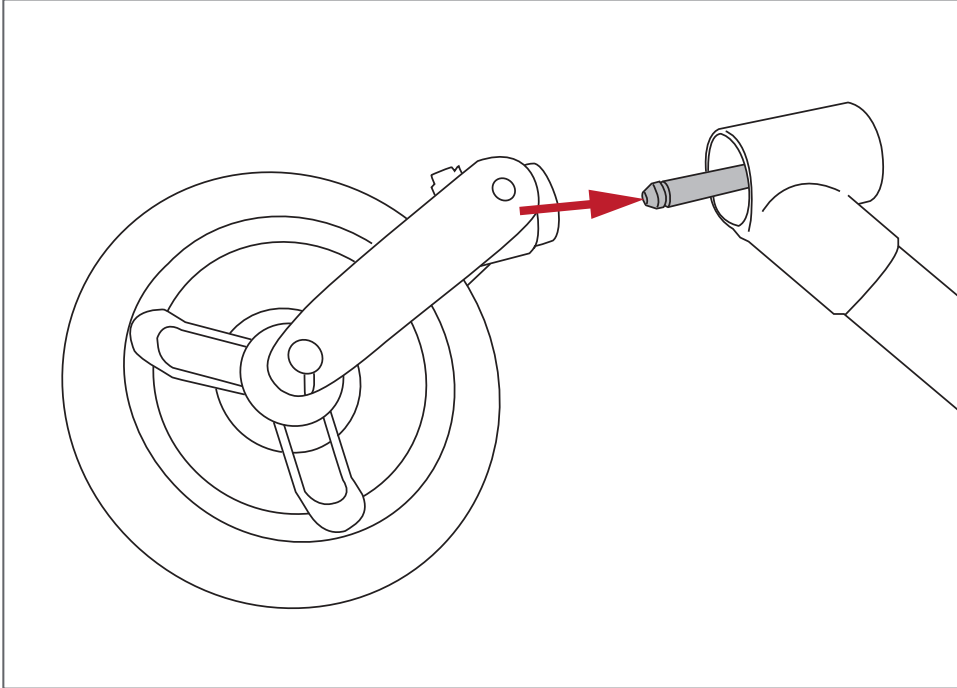

 
4.2

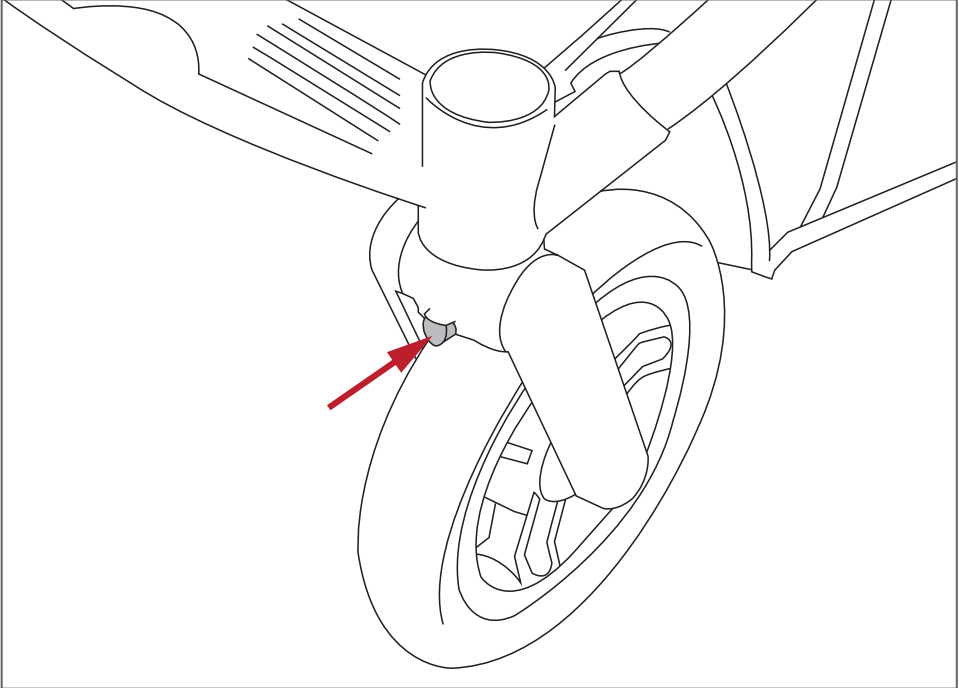

 
7.1

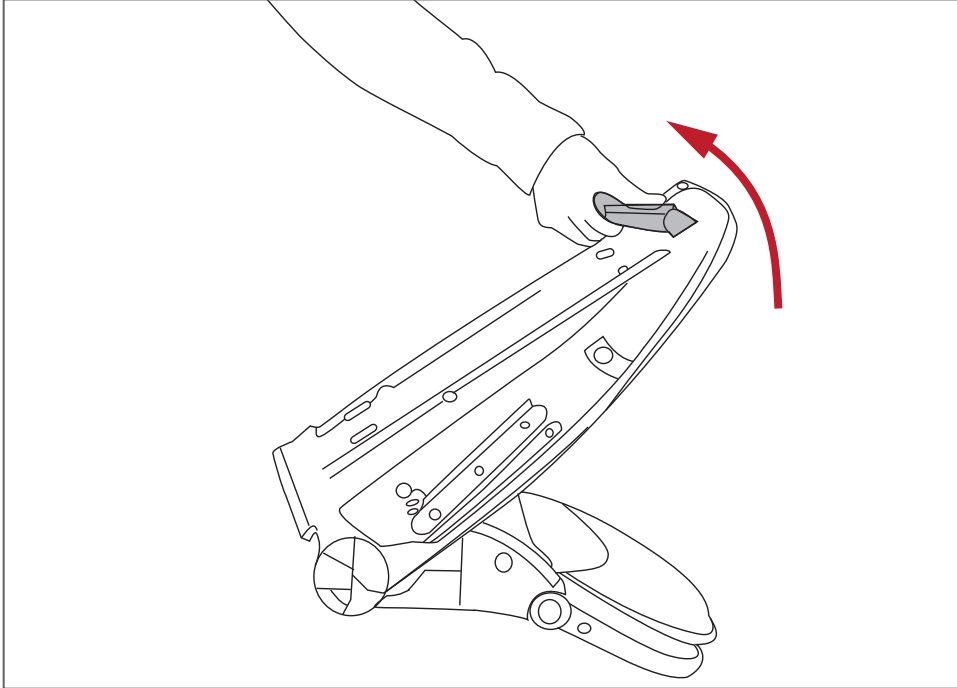

 
5.1

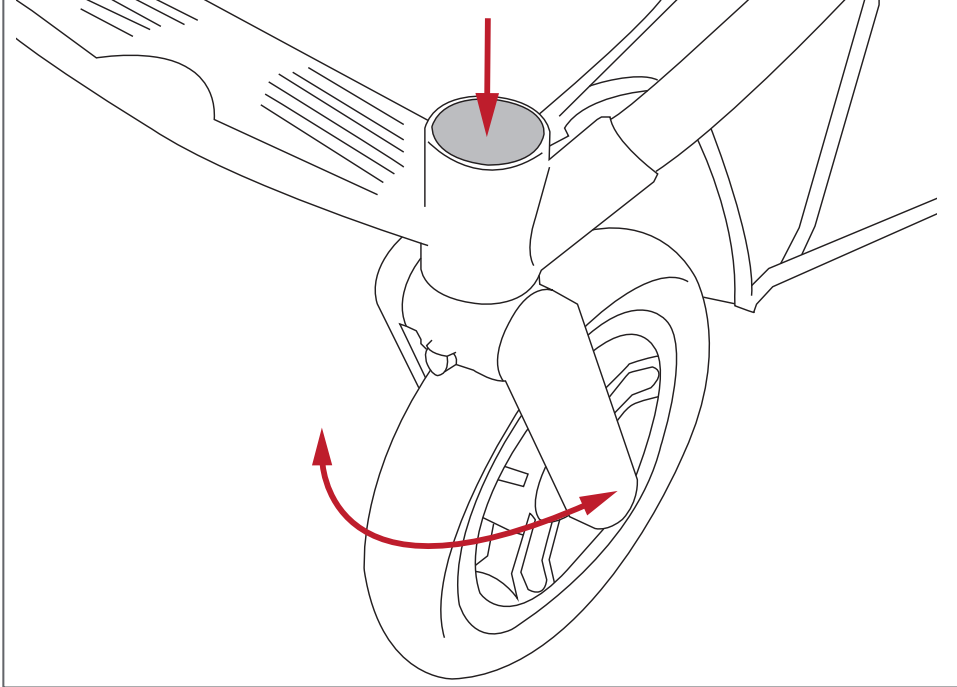

 
6.1

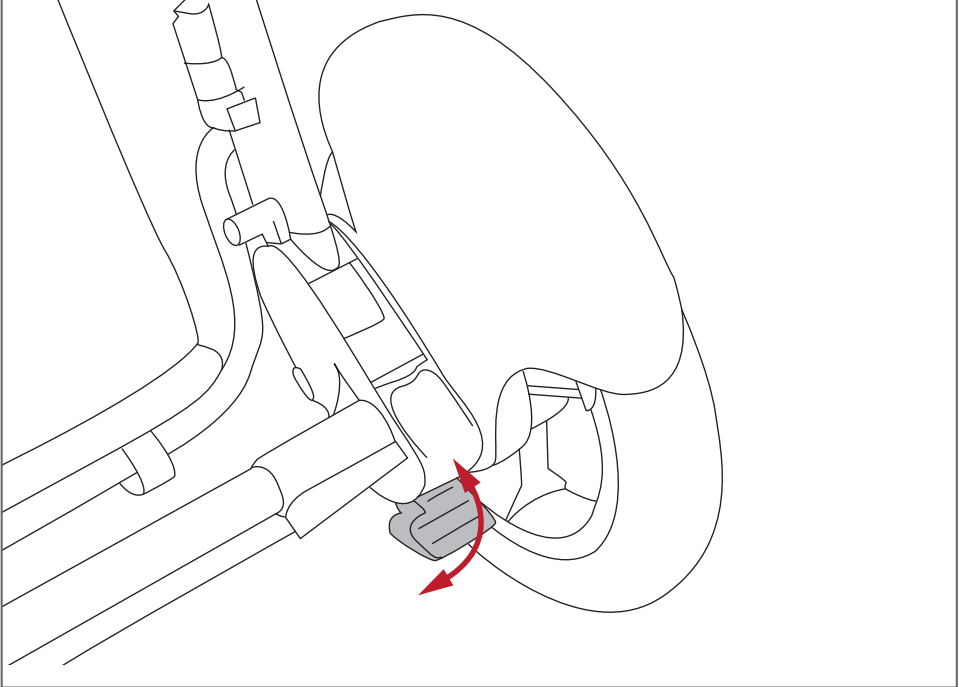

 
8.1

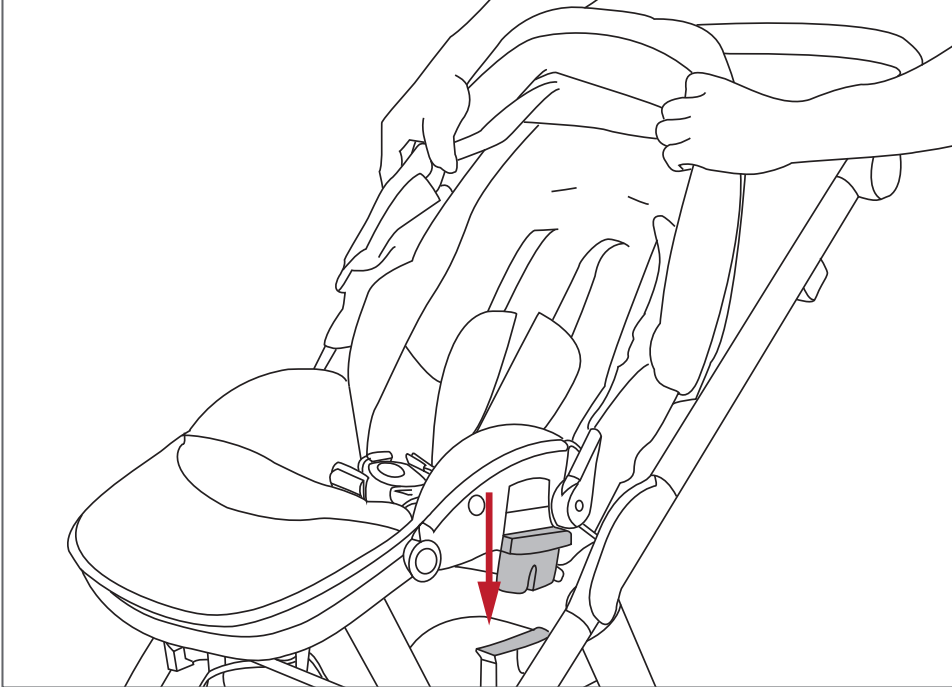

 
8.2

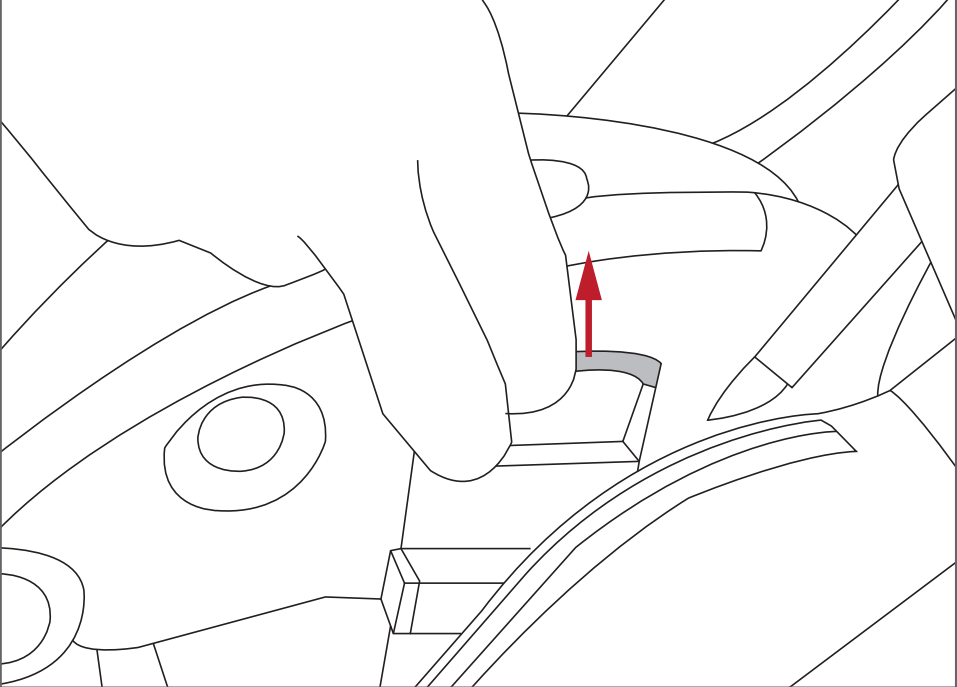

 
9.1

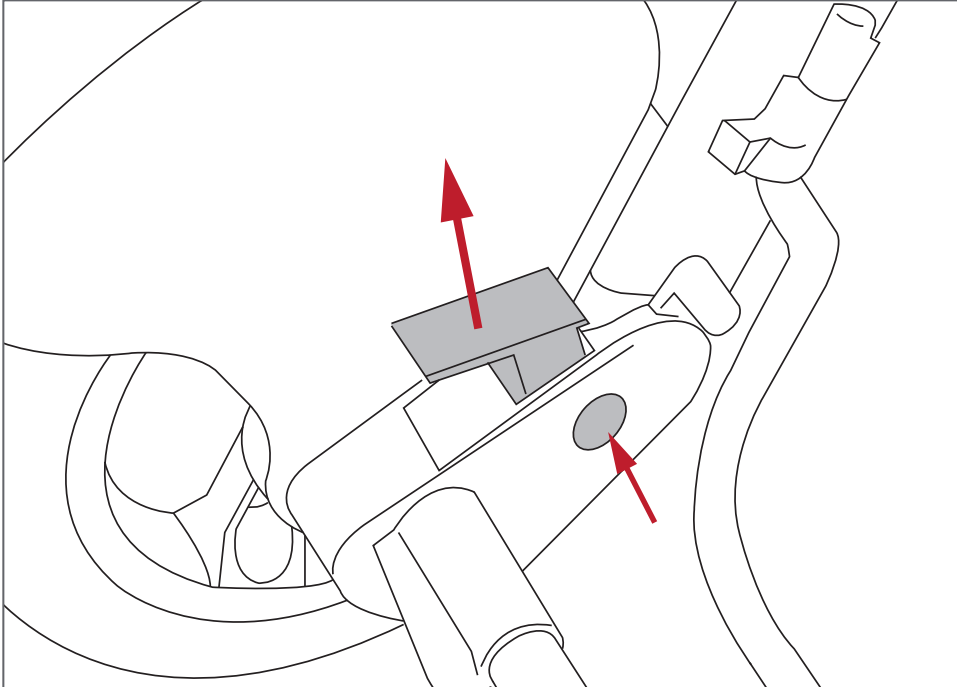

 
9.2

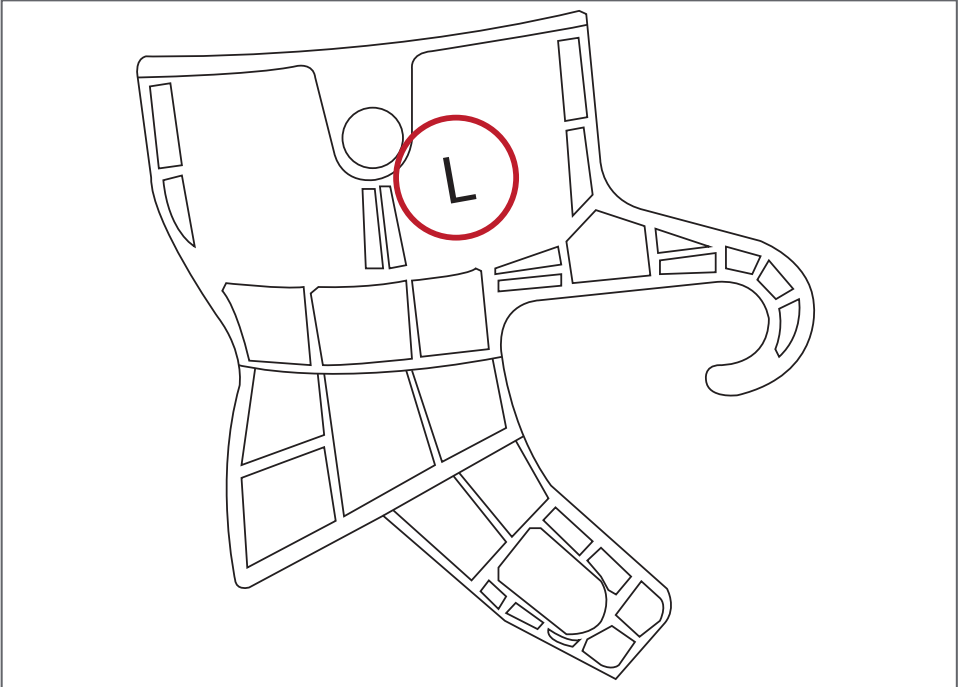

 
10.1

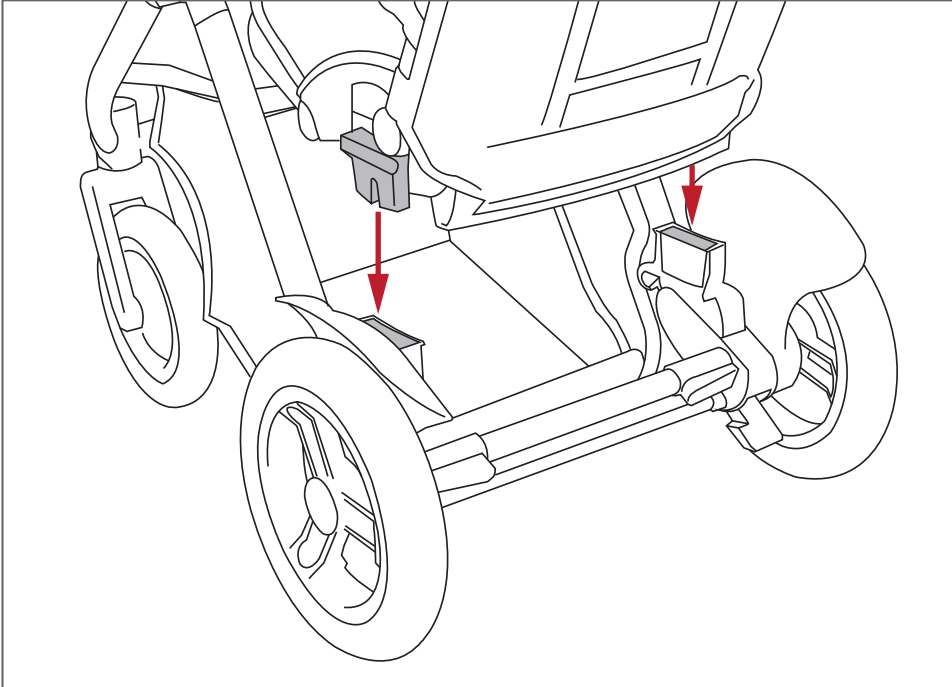

 
10.2

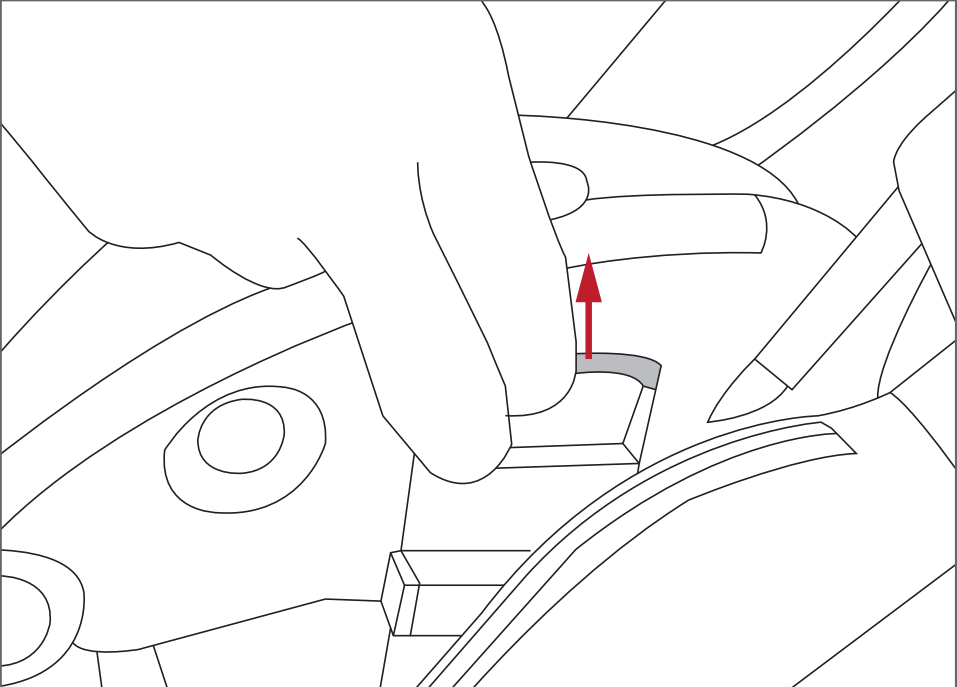

 
9.3

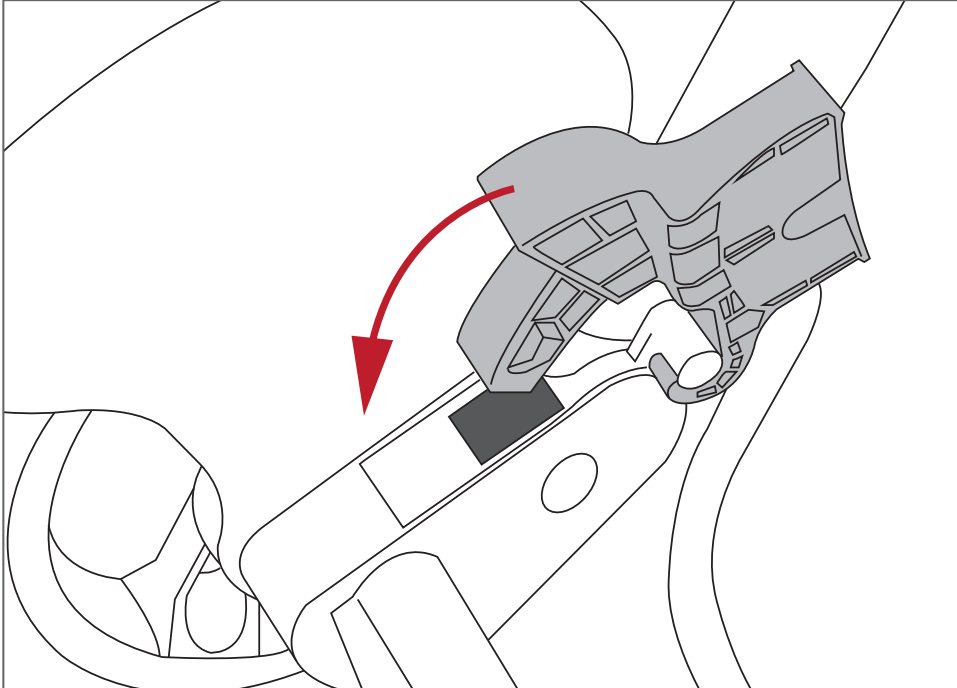

 
9.4

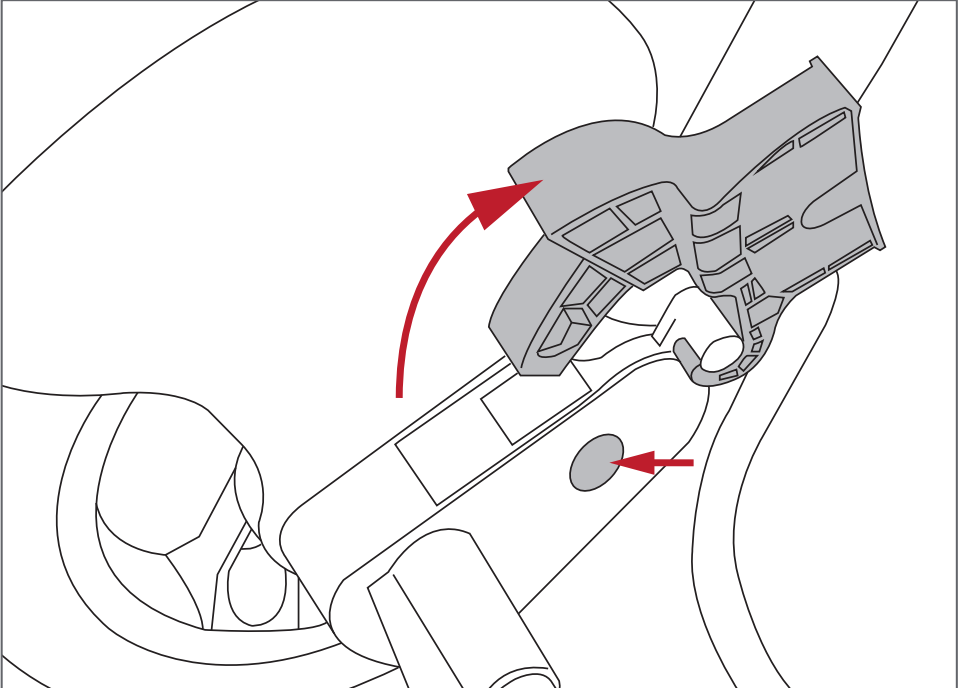

 
11.1

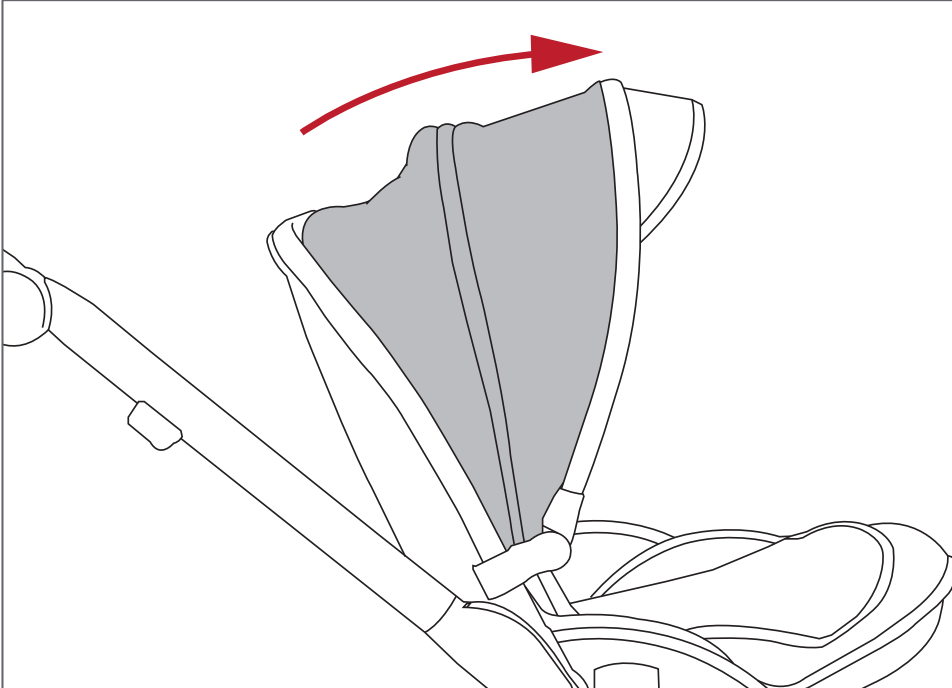

 
11.2

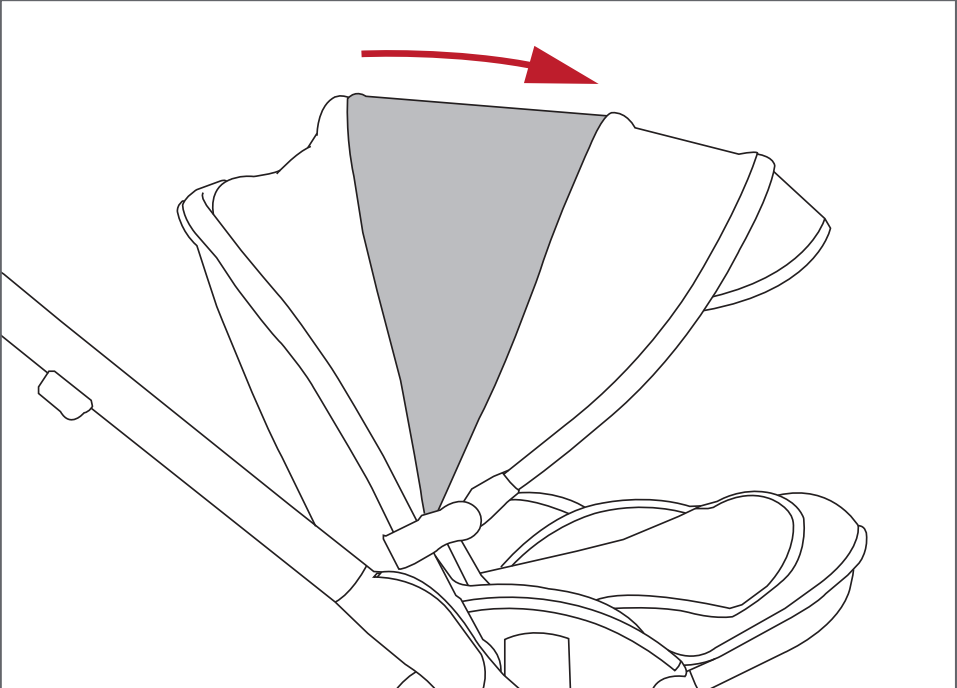

 
12.1

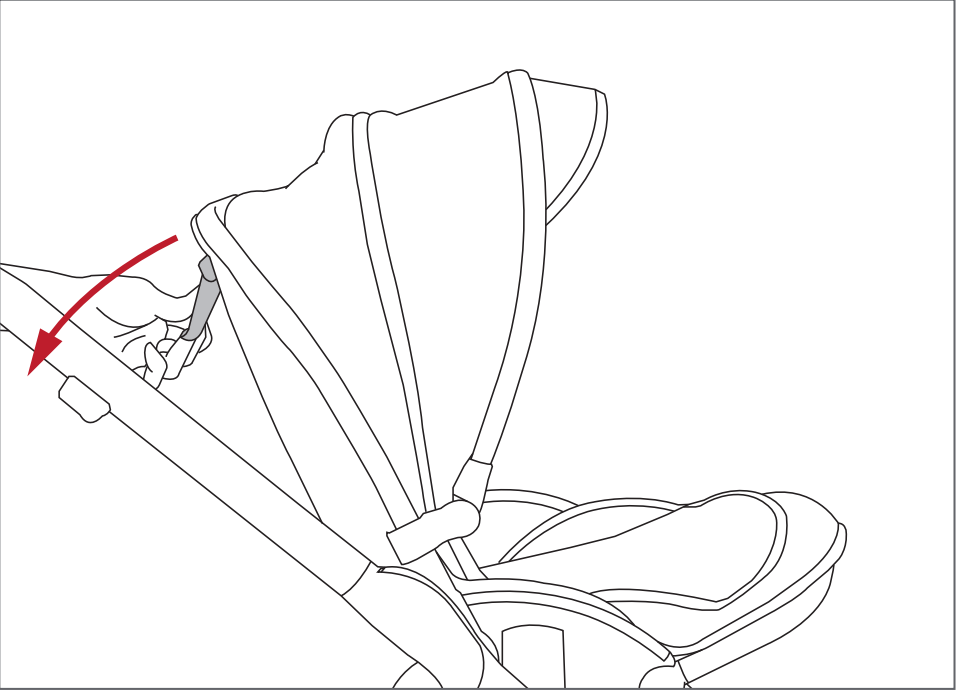

 
13.1

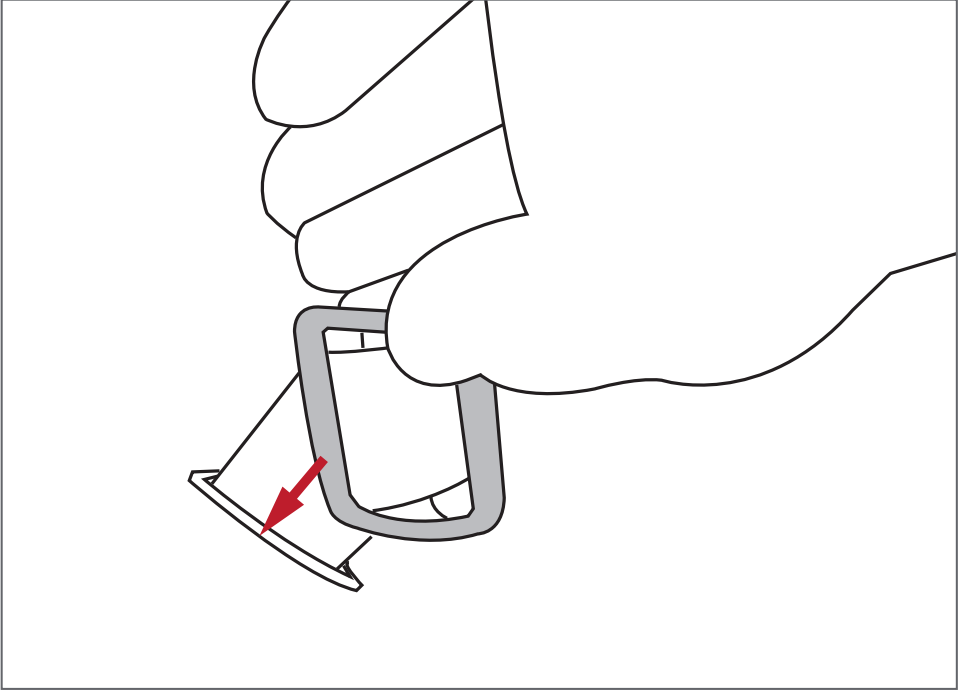

 
13.2

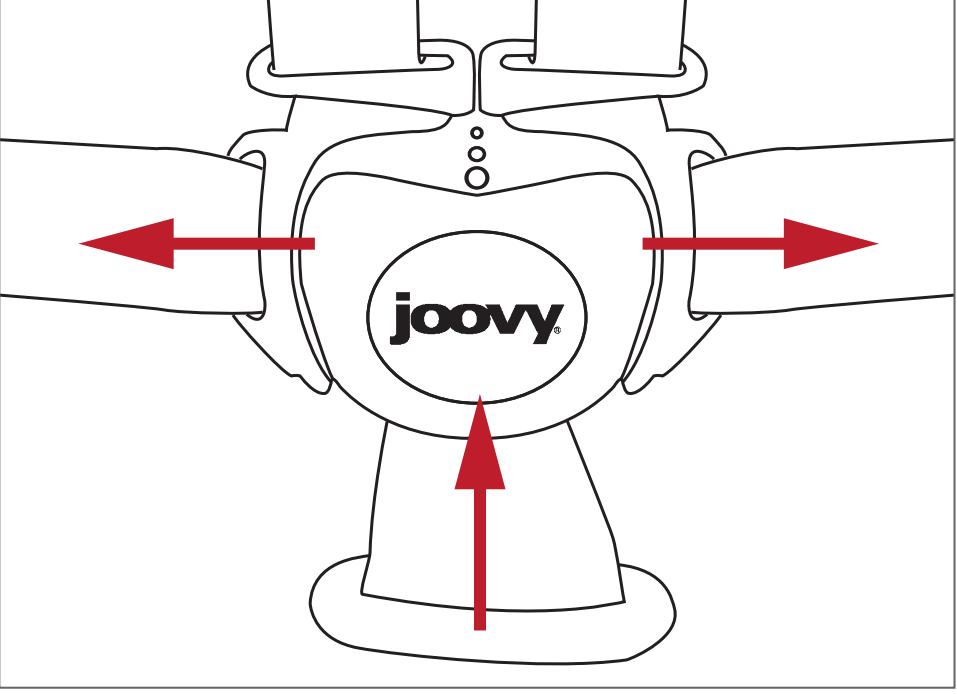

 
13.3

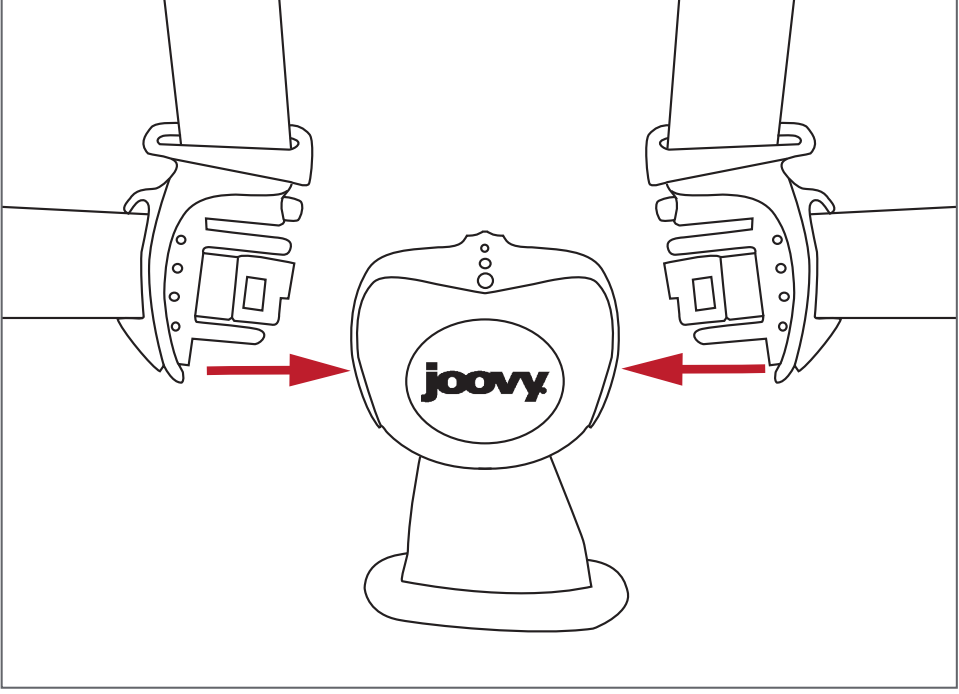

 
14.1

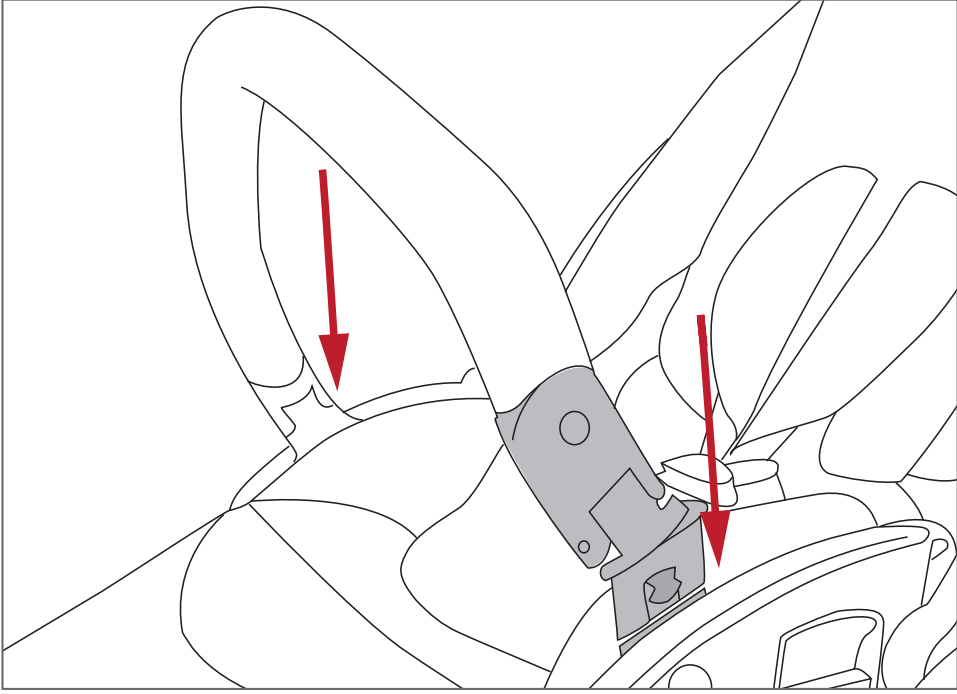

 
14.2

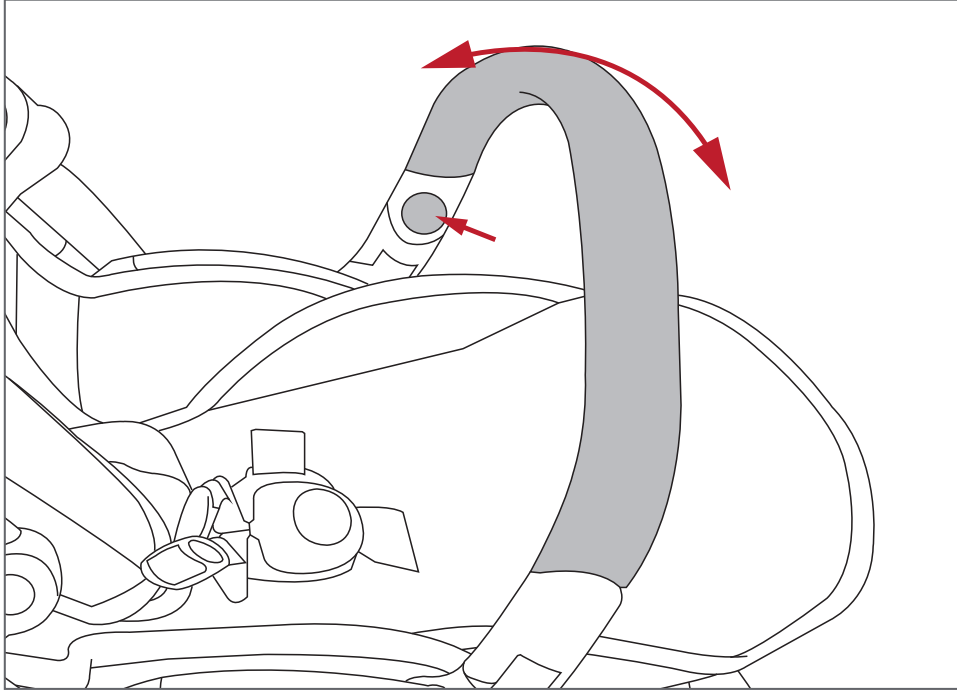

 
16.1

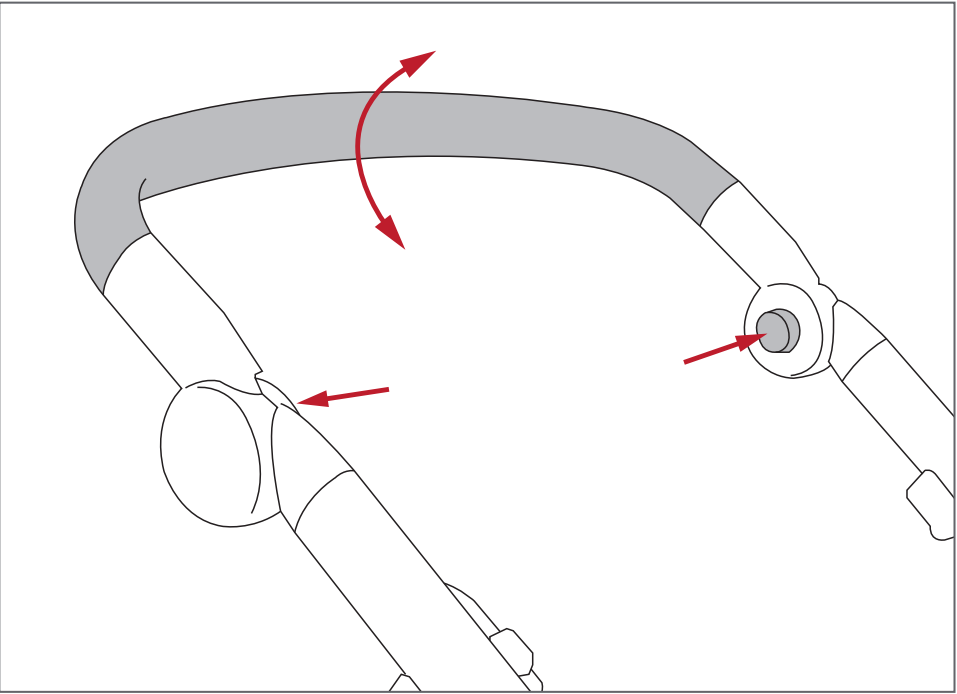

 
18.1

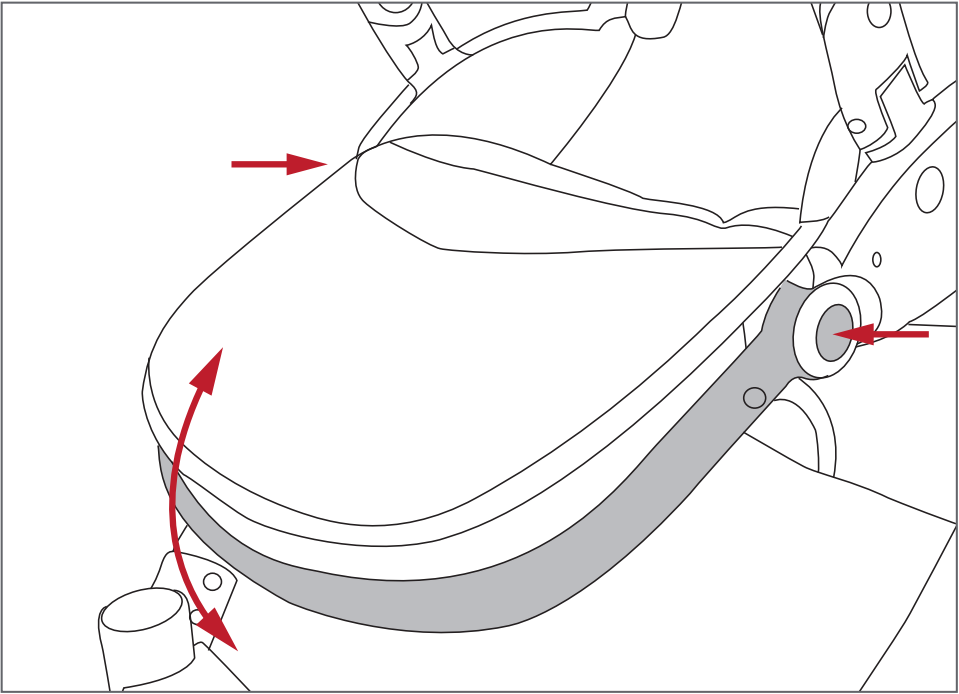

 
20.1

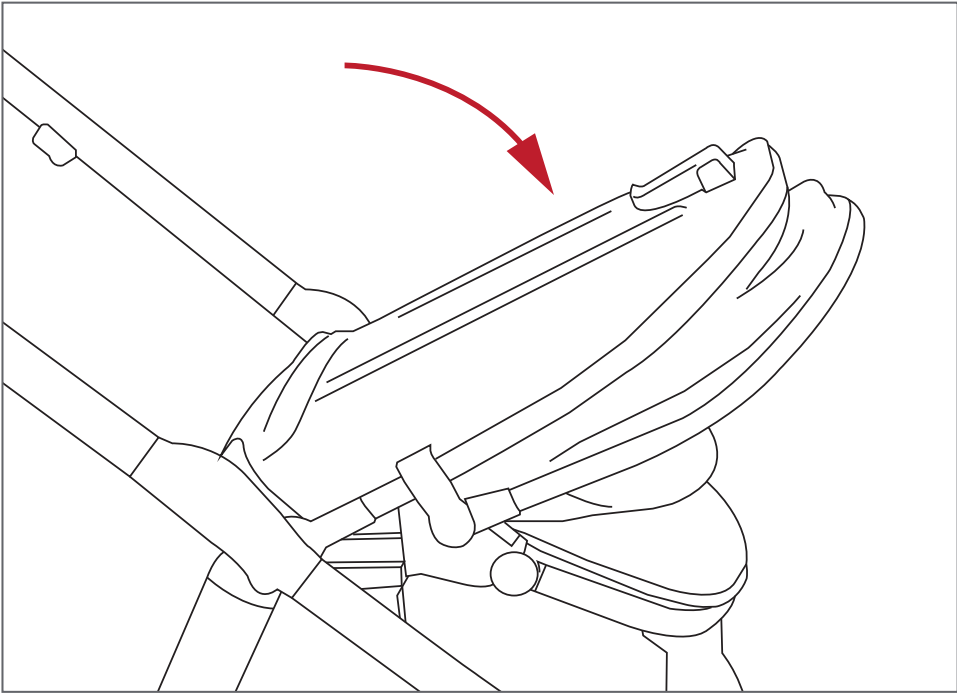

 
20.2

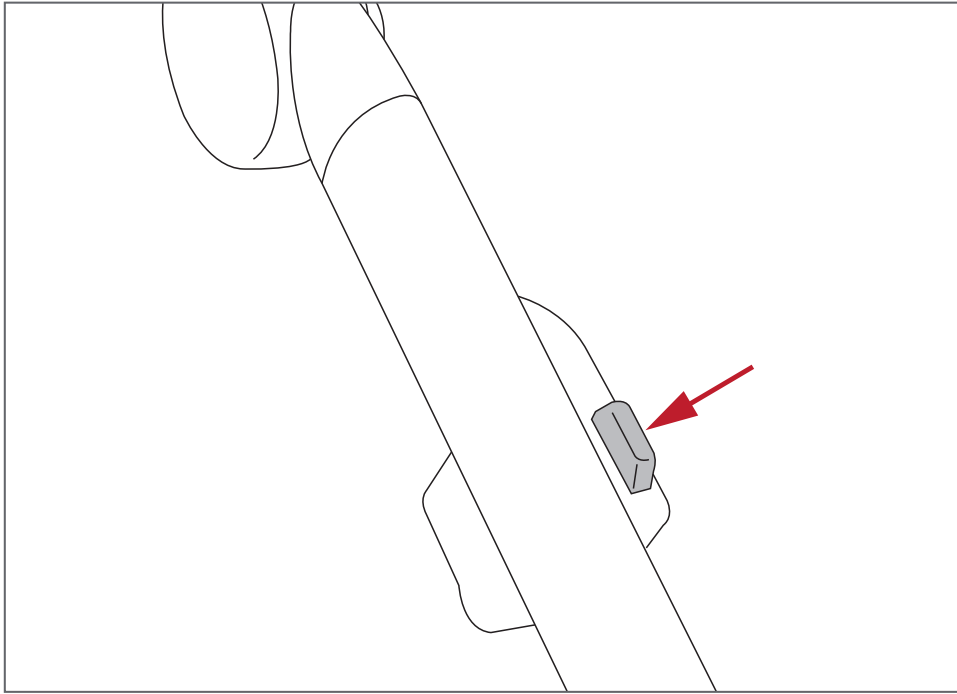

 19.1

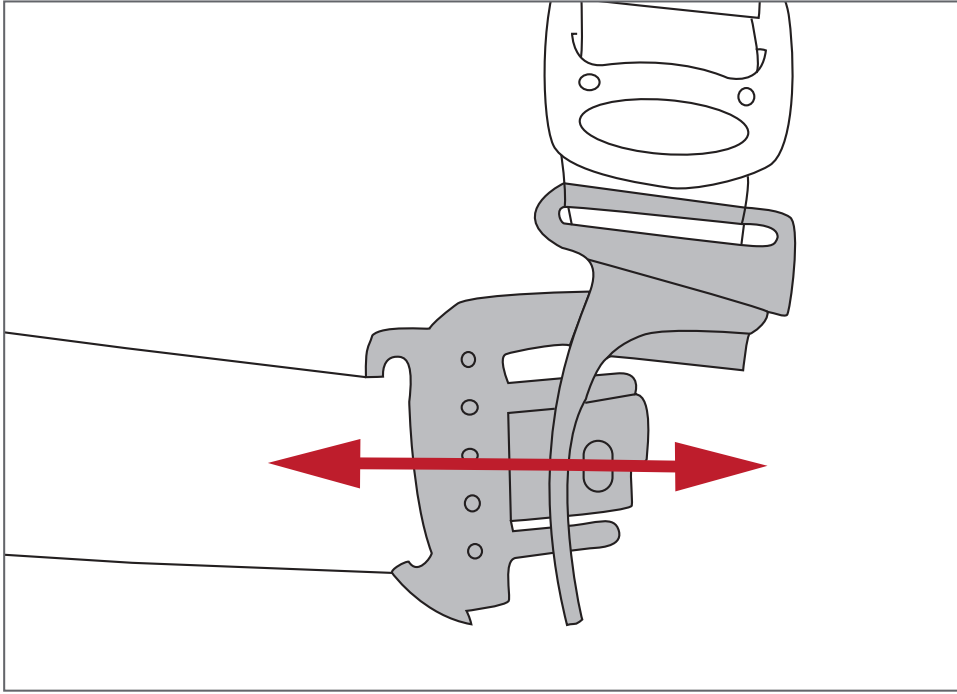

 20.3

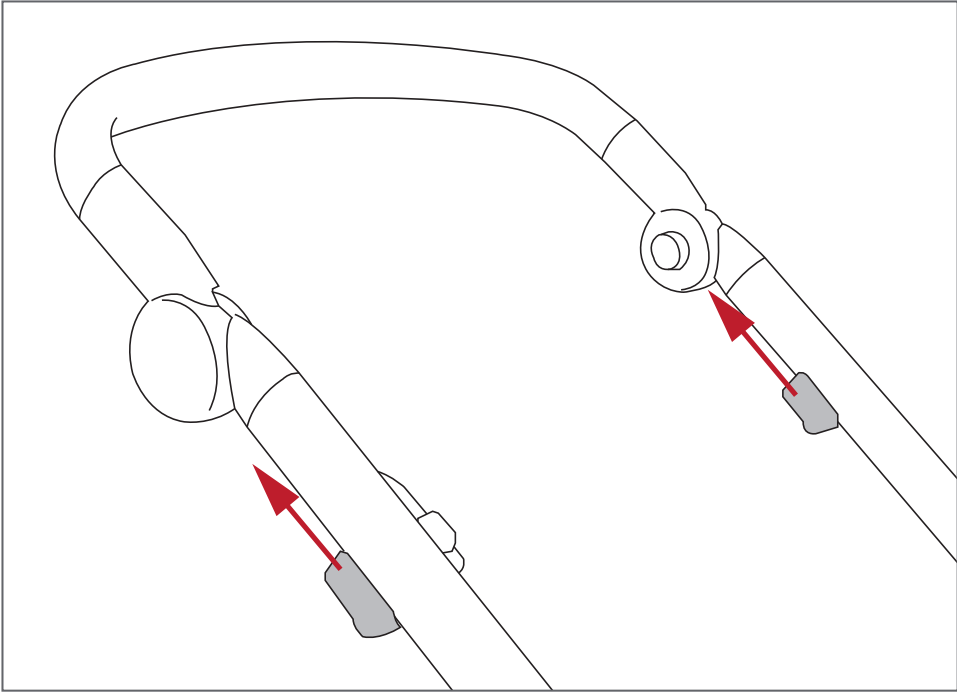

20.4

